

Request for Quote

STATE OF RHODE ISLAND AND PROVIDENCE PLANTATIONS
ONE CAPITOL HILL
PROVIDENCE RI 02908

CREATION DATE : 10-DEC-12
BID NUMBER: 7458348
TITLE: FURNISH AND INSTALL MOJAVE 4V5 DRY VACUUM QUAD SYSTEM - CCRI

BLANKET START : 15-JAN-13
BLANKET END : 30-JUN-13
BID CLOSING DATE AND TIME:09-JAN-2013 10:00:00

BUYER: Mosca, Gary
PHONE #: 401-574-8124

**B
I
L
L
T
O**
CCRI CONTROLLER'S OFFICE
ACCOUNTS PAYABLE
400 EAST AVENUE
WARWICK, RI 02886
US

**S
H
I
P
T
O**
CCRI FLANAGAN CAMPUS
1762 LOUISQUISSET PIKE
LINCOLN, RI 02865-4585
US

Requisition Number: 1295163

Note to Bidders: Questions concerning this solicitation may be emailed to gary.mosca@purchasing.ri.gov no later than 12/21/12 @ 8:00 AM (EST). Questions should be submitted in a Microsoft word attachment. Please reference the RFQ # on all correspondence. Questions received if any, will be posted on the internet as an addendum to this solicitation. It is the responsibility of all interested parties to download this information.

THERE WILL BE A PRE BID CONFERENCE HELD TUESDAY, DECEMBER 18, 2012 @ 9:00 AM (EST).

LOCATION: CCRI FLANAGAN CAMPUS
1762 LOUISQUISSET PIKE
LINCOLN, RI 02865

PLEASE REPORT TO PHYSICAL PLANT DIRECTORS OFFICE.


****THIS IS A NO SUBSTITUTE BID****

Line	Description	Quantity	Unit	Unit Price	Total
1	FURNISH AND INSTALL (4) MOJAVE 4V5 DRY VACUUM QUAD SYSTEM WITH 20 GALLON CONTINUUM TANK & MMC FOR 16-20 USERS	4.00	Each		
2	FURNISH AND INSTALL 20 FT #54521 TUBING	20.00	Each		

Delivery: _____

Terms of Payment: _____

It is the Vendor's responsibility to check and download any and all addenda from the RIVIP. This offer may not be considered unless a signed RIVIP generated Bidder Certification Cover Form is attached and the Unit Price column is completed. The signed Certification Cover Form must be attached to the front of the offer

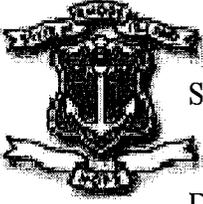

STATE OF RHODE ISLAND AND PROVIDENCE PLANTATIONS

Department of Administration
DIVISION OF PURCHASES
One Capitol Hill
Providence, RI 02908-5855

Tel: (401) 574-8100
Fax: (401) 574-8387
Website: www.purchasing.ri.gov

December 10, 2012

SPECIFICATIONS

THIS IS A NO SUBSTITUTE BID FOR THE INSTALLATION OF (4) AIRTECH 4V5 MOJAVE DRY VACUUMS, QUAD SYSTEM W/ 20 GALLON CONTINUUM TANK & MMC FOR 16-20 USERS PER ATTACHED SPECIFICATIONS.

1. FURNISH AND INSTALL (4) MOJAVE 4V5 DRY VACUUM QUAD SYSTEM WITH 20 GALLON CONTINUUM TANK & MMC FOR 16-20 USERS
2. FURNISH AND INSTALL 20 FT #54521 TUBING
3. VENDOR MUST BE A CERTIFIED DEALER, INSTALLER, AND SERVICE PROVIDER FOR AIR TECHNIQUES INC.
4. VENDOR RESPONSIBLE FOR SHIPPING AND DELIVERY AND INSTALLATION ONSITE AT CCRI LINCOLN CAMPUS MOD 1 SOUTH BASEMENT ROOM 1012.
5. VENDOR TO PROVIDE TO CCRI DRAWINGS REQUIRED FOR UTILITY ROUGH-IN FOR NEW EQUIPMENT.
6. CCRI RESPONSIBLE FOR ALL ROUGH-IN UTILITY WORK.
7. FINAL EQUIPMENT INSTALLATION BY VENDOR TO BE AFTER 6 PM, MON - FRI, AS SCHEDULED WITH CCRI PHYSICAL PLANT DEPARTMENT.
8. DELIVERY AND INSTALLATION TO BE COMPLETED WITHIN 30 DAYS OF AWARD.
9. INSTALLATION TO BE APPROVED BY PHYSICAL PLANT.
10. VENDOR TO PROVIDE TRAINING FOR PM AND OPERATION OF ALL NEW EQUIPMENT.

Specifications Continued:

11. AT COMPLETION AND ACCEPTANCE OF INSTALLATION, VENDOR TO PROVIDE TO CCRI AN OPERATIONS MANUAL FOR ALL NEW EQUIPMENT CONTAINING ALL PERTINENT VENDOR AND MANUFACTURING DOCUMENTS, SCHEMATICS, AND WARRANTIES ETC.

12. VENDOR TO PROVIDE FULL THREE (3) YEAR WARRANTY INCLUDING LABOR AND ALL PARTS STARTING ON DATE OF ACCEPTANCE OF INSTALLATION.


13. VENDOR TO PROVIDE THREE (3) YEARS OF SERVICE AND MAINTENANCE AS SPECIFIED BY AIR TECHNIQUES.

MOJAVE

DRY VACUUM SYSTEM

PART NUMBERS V3, V5, 2V3, 2V3CT, 2V5, 2V5CT, 3V5 AND 4V5

USER'S MANUAL

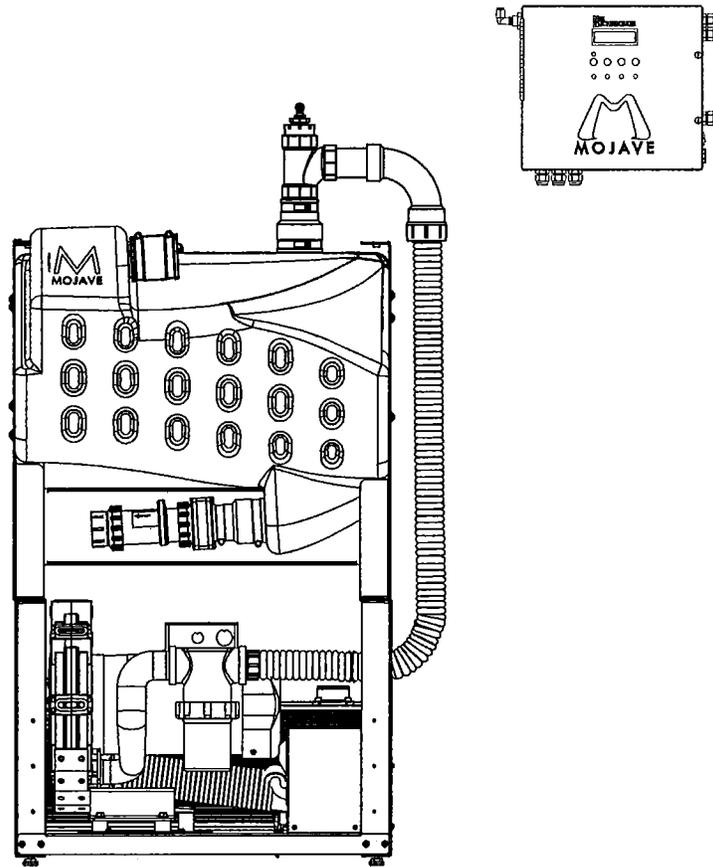

AIR equipped for life
TECHNIQUES

ISO
9001
ISO 13485
FDA-GMP COMPLIANT

TABLE OF CONTENTS

<u>Description</u>	<u>Page</u>
Congratulations	4
Safety Summary	4
Purpose of this Manual	5
Sizing Guide	5
Specifications	6
Product Description	7
Installation Information	10
MOJAVE System Configurations	14
Installation	15
V3 and V5 System Installation	16
Master Controller Installation	19
2V3CT, 2V5CT, 2V3 and 2V5 System Installation	20
3V5 and 4V5 System Installation	23
Electrical Connections	26
Operating Information	27
Operation	31
Troubleshooting	32
Maintenance	34
Accessories/Options	36
Warranty	37

LIST OF ILLUSTRATIONS

<u>Figure</u>	<u>Description</u>	<u>Page</u>
1	Main System Components	8
2	Typical MOJAVE Functional Flow Diagram	9
3	MOJAVE System Component Dimensions	11
4	V3, 2V3, 2V3CT, V5, 2V5, 2V5CT, 3V5 and 4V5 System Floor Plan	13
5	MOJAVE System Configuration Layouts	14
6	Stacking the MT10 Tank on Top of a MOJAVE Pump Hardware Detail	15
7	Stacking Two MOJAVE Pumps Hardware Detail	15
8	MOJAVE V3/V5 Pump and MT10 Tank Connection Diagram, Sheet 1	17
8	MOJAVE V3/V5 Pump and MT10 Tank Connection Diagram, Sheet 2	18
9	MOJAVE Master Controller Assembly and Washout Solenoid Mounting	19
10	MOJAVE Dual Pump and Tank Connection Diagram, Sheet 1	21
10	MOJAVE Dual Pump and Tank Connection Diagram, Sheet 2	22
11	Pump/Tank Connection Manifold Using Accessory Kit	25
12	3V5 System Connection Detail Using Accessory Kit	25
13	4V5 System Connection Detail Using Accessory Kit	25
14	MOJAVE Pump Power Connection	26
15	Master Controller Wiring Diagram	26
16	Master Controller Assembly Controls and Indicators	28
17	Clean Stream Dispenser Cap Adaptor Locations	36

CONGRATULATIONS

Congratulations on the purchase of your new **MOJAVE** Dry Vacuum System that provides the state of the art in vacuum technology. This medical grade vacuum system is designed for reliable operation in the modern dental facility. The system uses a 100% oil-less Vacuum Pump to produce the high-volume air flow required for multiple simultaneous users while the Separator tank ensures that no liquids enter the pump.

In addition, **MOJAVE** incorporates an efficient energy management system. This is accomplished by adding a Variable Frequency Drive (VFD) to the Vacuum Pump, which is controlled by a Master Controller. This controller automatically adjusts the frequency of the pump to maintain the required vacuum level depending on the needs of your dental facility. With this balanced system, each user always has the flow rate necessary to do the job while conserving electricity and prolonging the life of your pumps.

SAFETY SUMMARY

Use of **MOJAVE** not in conformance with the instructions specified in this manual may result in permanent failure of the unit.

WARNING: To prevent fire or electrical shock, do not expose this appliance to rain or moisture.

All user serviceable items are described in the maintenance section.

ATTENTION USERS:

Markings. The following terms or symbols are used on the equipment or in this manual to denote information of special importance:



Alerts users to important Operating and Maintenance instructions. Read carefully to avoid any problems.



Warns users of hot surfaces. There is a danger of burns. Work near these surfaces only after they have cooled down.



Warns users that uninsulated voltage within the unit may be of sufficient magnitude to cause electric shock.



Identifies the name of the manufacturer.



Indicates date of manufacture

I ON
O OFF

Indicates the ON and OFF position for the Equipment power switch.



Indicates protective Earth Ground for the Equipment power switch.



MEDICAL ELECTRICAL EQUIPMENT

WITH RESPECT TO ELECTRICAL SHOCK, FIRE, MECHANICAL
AND OTHER SPECIFIED HAZARDS ONLY
IN ACCORDANCE WITH UL-60601-1, CAN/CSA C22.2 NO.601.1
66CA

PURPOSE OF THIS MANUAL

This manual provides installation, operation and maintenance instructions for the support of the six available **MOJAVE** Dry Vacuum System configurations listed below. Although not listed, each system also includes a Master Controller. Review and follow the guidelines included in this User Manual to ensure that the system provides the highest level of service.

System	Description	Maximum Users
V3	One V3 Dry Vacuum Pump and an MT10 Tank	3
V5	One V5 Dry Vacuum Pump and an MT10 Tank	5
2V3	Two V3 Dry Vacuum Pumps and an MT10 Tank	6
2V3CT	Two V3 Dry Vacuum Pumps and a CT20 Tank	6
2V5	Two V5 Dry Vacuum Pumps and an MT10 Tank	10
2V5CT	Two V5 Dry Vacuum Pumps and a CT20 Tank	10
3V5	Three V5 Dry Vacuum Pumps and a CT20 Tank	15
4V5	Four V5 Dry Vacuum Pumps and a CT20 Tank	20

SIZING GUIDE

Choosing the right configuration of Mojave for your practice depends on the number of air users and the anticipated air demand. To ensure optimum operation, the demands should not exceed the number of air handpiece users shown below. The chart lists the number of simultaneous High Volume Evacuators (HVEs) and Saliva Ejectors (SEs) that can be used in specific **MOJAVE** system configurations.

Recommended Number of Simultaneous HVE/SE Users

V3 System		V5 System		2V3 or 2V3CT System		2V5 or 2V5CT System		3V5 System		4V5 System	
HVE	SE	HVE	SE	HVE	SE	HVE	SE	HVE	SE	HVE	SE
3	+ 0	5	+ 0	6	+ 0	10	+ 0	15	+ 0	20	+ 0
2	+ 2	4	+ 2	5	+ 2	9	+ 2	14	+ 2	18	+ 4
0	+ 6	2	+ 6	3	+ 6	7	+ 6	12	+ 6	13	+ 14
		0	+ 10	1	+ 10	5	+ 10	9	+ 12	10	+ 20
				0	+ 12	3	+ 14	6	+ 18	8	+ 24
						1	+ 18	2	+ 26	5	+ 30
						0	+ 20	0	+ 30	0	+ 40

Note: 1 HVE = 2 SE's / 1 HVE = 2 Nitrous Scavengers

SPECIFICATIONS

Master Controller Electrical Specifications

Voltage (Volts AC)	120 (± 10%)
Full Load Current (Amps AC)	5
Input Frequency (Hz)	60

Pump Electrical Specifications	V3	V5	2V3 & 2V3CT	2V5 & 2V5CT	3V5	4V5
Voltage (Volts AC)	205 - 240	205 - 240	205 - 240	205 - 240	205 - 240	205 - 240
Full Load Current (Amps AC)	12	15	24	30	45	60
Input Frequency (Hz)	60	60	60	60	60	60
Preset Vacuum Level (InHg)	8	8	8	8	8	8
Horsepower (each V3 or V5 pump)	1.1 kW or 1.5 HP					

Tank Specifications	V3, V5, 2V3 & 2V5	2V3CT, 2V5CT, 3V5 & 4V5
Working Liquid Capacity	MT10 Tank 10 gallon maximum capacity	CT20 Continuum Tank infinite volume capacity
Tank Material (All systems)	Rotomolded Plastic	Rotomolded Plastic

System Environmental Conditions (All Systems)

Operating Temperature	40 to 104°F or 10 to 40°C
Storage Temperature	0 to 150°F or -18 to 66°C
Relative Humidity	90%, no condensation

UL60601-1 CLASSIFICATION

Protection against electrical shock (5.1, 5.2) Class I, Transportable, Continuous Operation. No applied parts. Protection against ingress of liquids-Ordinary Equipment not suitable for use in the presence of flammable anaesthetic mixture with air or with oxygen or nitrous oxide.

All MOJAVE vacuum pumps comply with NFPA 99C level 3 requirements.

As shown by Figure 1, the **MOJAVE** Dry Vacuum System consists of the major components listed below.

Vacuum Pump Assemblies V3 or V5.

- A single-stage pump, where all of the wetted metal parts are nickel plated or stainless steel.
- A metal electrical enclosure that houses a VFD (Variable Frequency Drive), circuit breaker, and an interface PCB.
- An aluminum heat exchanger to cool the exhaust air from the pump before it travels through the exhaust vent.
- A metal chassis for mounting components.

10 Gallon Separation Tank Assembly MT10.

- A molded plastic tank that is capable of holding 10 gallons of liquid.
- An internal float switch that signals the Master Controller to turn the vacuum pump OFF if the liquid level exceeds the preset level.
- A washout port with internal nozzle that is used to rinse the interior of the tank during the automatic Washout Cycle.
- A metal chassis for mounting components.


Continuum Separation Tank Assembly CT20.

- The continuum tank combines two molded plastic tanks connected via a check valve and two solenoid valves. This tank is capable of handling an infinite volume of liquid because one tank section drains as the other tank section fills, while maintaining a preset vacuum level.
- Each tank has an internal float switch that signals the Master Controller to toggle the state of each tank solenoid.
- Solenoids keep the liquid moving through the tanks by controlling the venting and pressurization of each tank.
- Each tank has a washout port with internal nozzle that is used to rinse the interior of the tank during the automatic Washout Cycle.
- A metal chassis for mounting components.


Master Controller. A Main PCB, Front Panel PCB and an LCD Display PCB mounted in a metal Enclosure that:

- Provides the operational user interface for the **MOJAVE** system.
- Monitors and displays the frequency, vacuum level and temperature.
- Records the run time, in hours, of up to 4 connected pumps.
- Balances the vacuum load equally across all running pumps.
- Displays any error/fault codes.
- Controls the Washout function.

PRODUCT DESCRIPTION

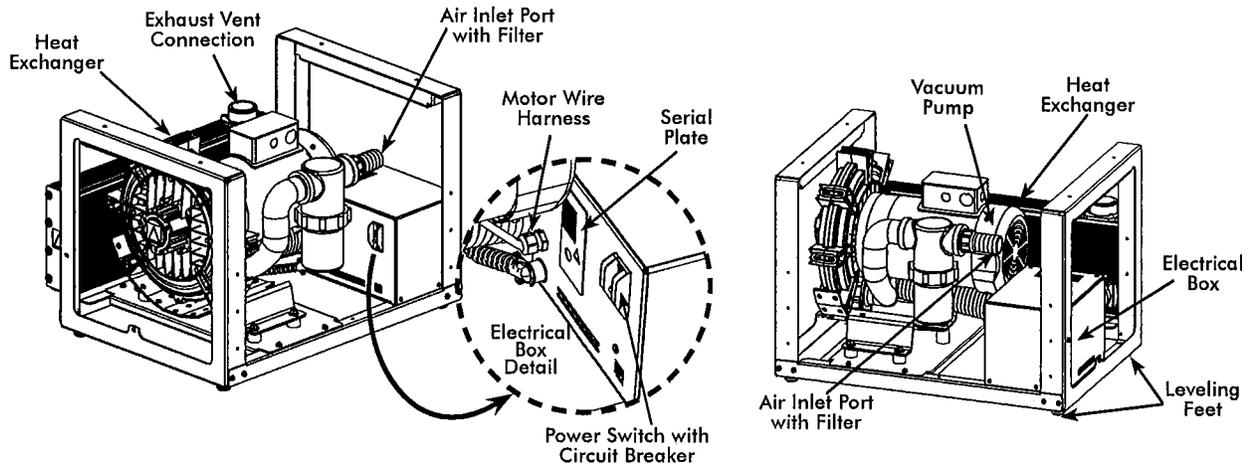


V3 and V5 Vacuum Pumps

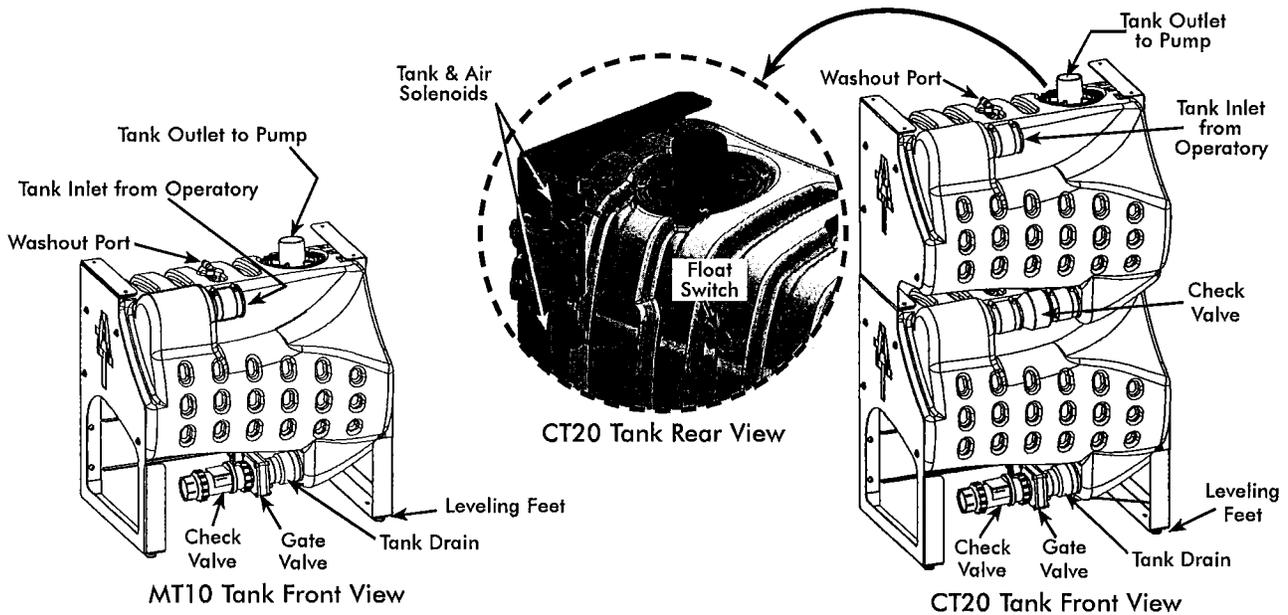

MT10 Tank Front View

CT20 Tank Rear View

CT20 Tank Front View

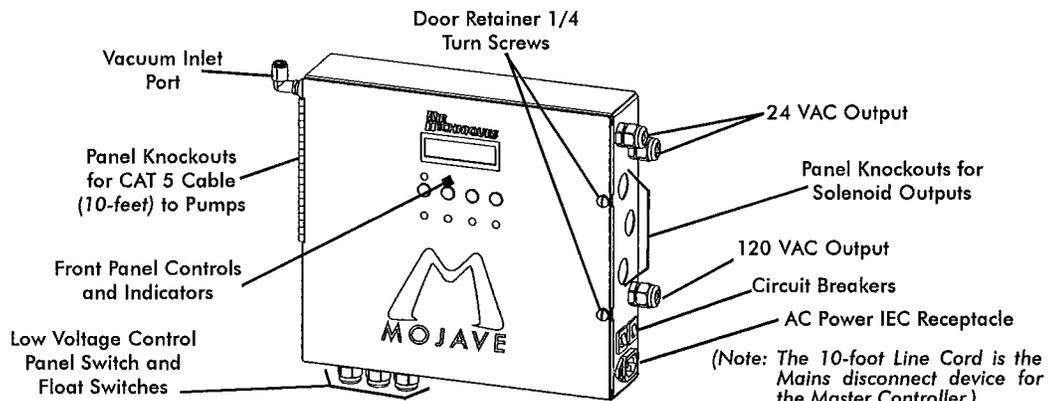

Master Controller

Figure 1. Main System Components



Any time the power to the MOJAVE is turned OFF the tanks will automatically drain.

Vacuum System Operation.

Air, water, and solids from the operatory are pulled into the separator tank. Air is expelled out through the pump exhaust while liquids and solids fall to the bottom of the tank. The vacuum in the tank keeps the check valve to the drain closed and the tank gradually fills.

In single tank (MT10) configurations, if the rising fluid level actuates the float switch, the Master Controller stops the operation of all connected pumps and an optional drain pump (sold separately) is turned on for one minute. With pump operation idle, the vacuum is no longer being maintained and the check valve of the tank drain opens allowing liquids and solids to drain from the separator tank. Once the tank drains, the Master Controller automatically restarts the primary pump.

Systems using the continuum tank (CT20), which is capable of handling infinite liquid volume capacities, operate differently. Each tank has an internal float switch. The tanks also use two 2-way solenoids. The float switches control the state of the two solenoids to allow the filling and draining of each tank, keeping the liquid moving through the tanks. When the top tank is filling, the bottom tank is draining and when a bottom tank is filling, the top tank is draining. The preset vacuum level is maintained in either state. If the top float switch is active, the Master Controller stops the operation of all connected pumps. Additionally, whenever the bottom tank float switch is activated, an optional drain pump (sold separately) is turned on for one minute. Once the tank drains, the Master Controller automatically restarts the primary pump.

When an instrument (suction tip) has been opened, the Master Controller senses an increase in vacuum demand and will instruct the VFD to speed up the motor.

Conversely, when an instrument (suction tip) has been closed, the Master Controller will instruct the VFD to slow motor operation down due to decrease vacuum demand. The Master Controller can also turn on and off up to 4 connected pumps to regulate the vacuum level.

Additionally, the Master Controller initiates a 2-minute tank washout cycle when the system has been in Standby for 5 minutes.

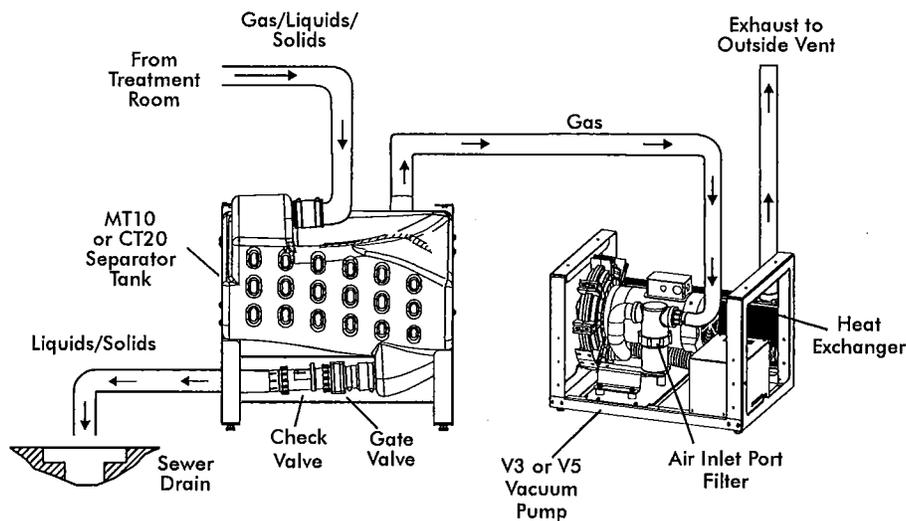


Figure 2. Typical MOJAVE Functional Flow Diagram

INSTALLATION INFORMATION



Grounding reliability can only be achieved when the Master Controller is connected to a HOSPITAL GRADE receptacle.

General. For new installations it is recommended to follow the following guidelines:

- Make sure to install the system in accordance with all local electrical and plumbing codes.
- Sizes of each suction line from the operatories differ between **MOJAVE** systems. See Site Requirements provided on page 12.
- The suction line should not have any sharp right angle bends and must be sloped a minimum of 1/4 inch for every 10 feet toward the separation tank.
- The drain on the base of the separation tank must be connected to a vented or an open floor drain capable of handling 10 gallons in 30 seconds. Drain pipe size 1 1/2 inch schedule 40.
- The drain line should be a short run with a minimum slope of 1/4 inch for every 10 feet toward the drain (avoid any sharp right angle bends).
- Vent line requirements differ among **MOJAVE** systems. See Site Requirements.
- Make sure to install the supplied drip leg assembly to the bottom end of the facility vent line.
- The vent should be sloped 1/4 inch per 10 feet towards the pump. Vent lines must be capable of handling vapors and liquids.
- The outside vent must be protected from rain and animals.
- A flexible air exhaust hose is provided to connect to the 2 inch diameter vent pipe and heat exchanger. Hose clamps are provided to secure hose to heat exchanger and pipe.
- Wash-out water supplied via 1/2 inch copper tubing terminated with a 1/2 inch FNPT shut-off valve providing water pressure between 20 and 100 psi.
- Wash-out port on the tank top is a 3/8 inch push to connect elbow that connects to the water supply via supplied 10 foot 3/8 inch Poly tubing and 1/2 MNPT x 3/8 inch push to connect adapter.
- As shown by Figure 4, the Master Controller is secured to the wall between the facility water supply and the tank using two 10-32 wall anchors. In addition to the water connection at the washout solenoid, electrical and vacuum connections must also be made.
- Accessory packs and system installation kits shipped with associated **MOJAVE** systems are listed below. Refer to the Installation Section for a listing of components supplied with each kit and the instructions necessary to install specific **MOJAVE** systems.


MOJAVE Accessory Packs and System Installation Kits

Part No.	Description	Included With
H5131	Master Controller Accessory Pack	Ships with every Master Controller
H5210	MT10 Tank Accessory Pack	Ships with every MT10 tank
H5170	MOJAVE V3 and V5 Pump Accessory Pack	Ships with every V3 Pump and V5 Pump
MIK2	MOJAVE Dual System Installation Kit	Ships with every 2V3 ,2V5, 2V3CT and 2V5CT System
MIK4	MOJAVE Triple and Quad System Installation Kit	Ships with every 3V5 and 4V5 System


INSTALLATION INFORMATION

Physical Characteristics


	Master Controller	Tank		One V3 or V5 Pump	Two V3 or V5 Pumps Stacked	Three V5 Pumps Stacked
		MT10 10 Gallon	CT20 Continuum			
Width	11 in. (28 cm)	25 in. (64 cm)	25 in. (64 cm)	25 in. (64 cm)	25 in. (64 cm)	25 in. (64 cm)
Depth	3 in. (8 cm)	17 in. (43 cm)	20 in. (51 cm)	19 in. (48 cm)	19 in. (48 cm)	19 in. (48 cm)
Height	10 in. (24 cm)	23 in. (58 cm)	42 in. (107 cm)	17 in. (43 cm)	34 in. (86 cm)	51 in. (130 cm)
Weight	13 Lbs. (6 kg)	75 Lbs. (34 kg)	150 Lbs. (68 kg)	145 Lbs (66 kg)	290 Lbs (132 kg)	435 Lbs (197 kg)

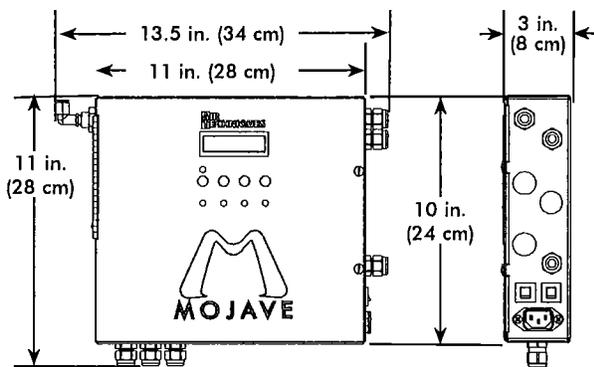


Master Controller Dimensions

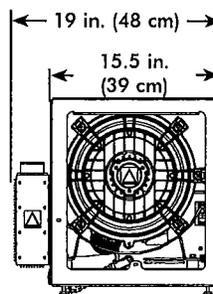

V3 and V5 Vacuum Pump Dimensions

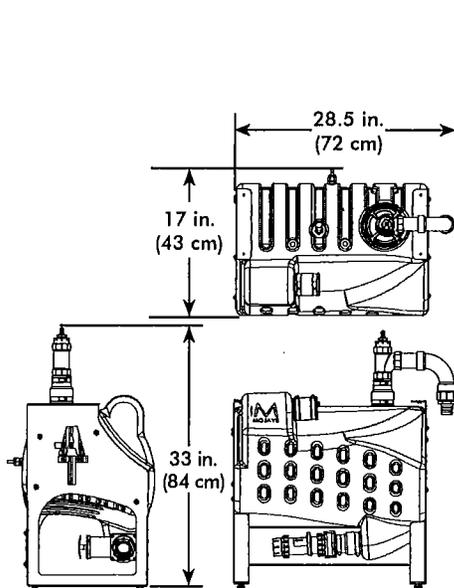

MT10 10 Gallon Tank Dimensions

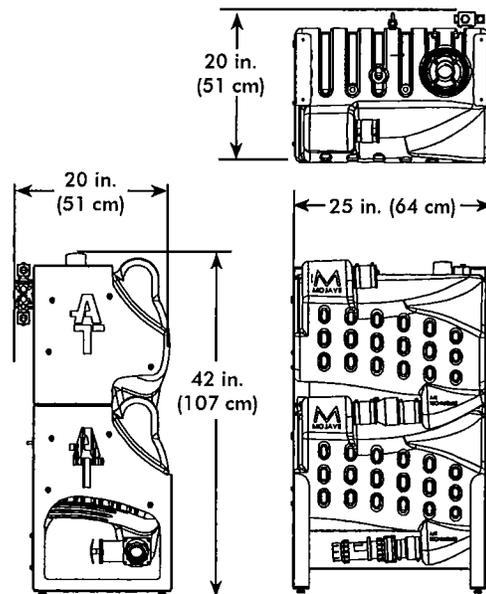

CT20 Continuum Tank Dimensions

Figure 3. Mojave System Component Dimensions

INSTALLATION INFORMATION

Site Requirements

Electrical	V3	V5	2V3 & 2V3CT	2V5 & 2V5CT	3V5	4V5	Master Controller
Voltage Rating Volts AC	220	220	220	220	220	220	120
Voltage Minimum/ Maximum	205/240	205/240	205/240	205/240	205/240	205/240	108/132 Volts AC
Wire Size AWG Minimum Gauge	#12 AWG (Qty 1)	#12 AWG (Qty 1)	#12 AWG (Qty 2)	#12 AWG (Qty 2)	#12 AWG (Qty 3)	#12 AWG (Qty 4)	#14 AWG
Minimum Circuit Breaker Rating	20A	20A	20A (Qty 2)	20A (Qty 2)	20A (Qty 3)	20A (Qty 4)	15A
Incoming Power	Hard wire Connection (Each pump is supplied with a 4 x 4 handy box and a 4 foot whip)						NEMA 5-15R (Supplied 10-ft. line cord)


Plumbing	V3	V5	2V3 & 2V3CT	2V5 & 2V5CT	3V5	4V5
Exhaust Vent Pipe Using Heat Exchanger	2" PVC Sch. 40	2" PVC Sch. 40	One 3" or two 2" PVC Sch. 40	One 3" or two 2" PVC Sch. 40	One 4" or three 2" PVC Sch. 40	Two 3" or four 2" PVC Sch. 40
Exhaust Vent Pipe Not Using Heat Exchanger (See note 1)	2" Metal Pipe	2" Metal Pipe	One 3" or two 2" Metal Pipe	One 3" or two 2" Metal Pipe	One 4" or three 2" Metal Pipe	Two 3" or four 2" Metal Pipe
Minimum Suction Line Pipe	1" PVC Sch. 40	1 1/2" PVC Sch. 40	1 1/2" PVC Sch. 40	2" PVC Sch. 40	3" PVC Sch. 40	3" PVC Sch. 40
Maximum Suction Line Pipe (See note 2)	1 1/2" PVC Sch. 40	2" PVC Sch. 40	2" PVC Sch. 40	2 1/2" PVC Sch. 40	4" PVC Sch. 40	4" PVC Sch. 40
Riser Pipe	1/2" PVC Sch. 40	1/2" PVC Sch. 40	1/2" PVC Sch. 40	1/2" PVC Sch. 40	1/2" PVC Sch. 40	1/2" PVC Sch. 40
Vacuum Line Termination	1 1/2" FNPT	2" FNPT	2" FNPT	2" FNPT	2" FNPT	2" FNPT
Branch Line Pipe	Size requirement of Branch piping differs by the number of operatories being serviced. Up to two operatories use 1" PVC Schedule 40. Three to six operatories use 1 1/2" PVC Schedule 40. More that six operatories use 2" PVC Schedule 40					
Drain Line Pipe	1 1/2" PVC Schedule 40					
Wash-Out Water Line	1/2" FNPT Shut-off Valve					

NOTES

1. Recommended for all new installations.
2. Use maximum internal diameter for the main line when preparing any new installation.

INSTALLATION INFORMATION

Installation Layout Space. Figure 4 shows the requirements for the installation of the various **MOJAVE** model configurations. Please note that all units are shipped with leveling feet set to lowest position. Heights can be increased by 1 inch by adjusting the leveling feet. Refer to Figure 5 for the recommended configuration arrangements.

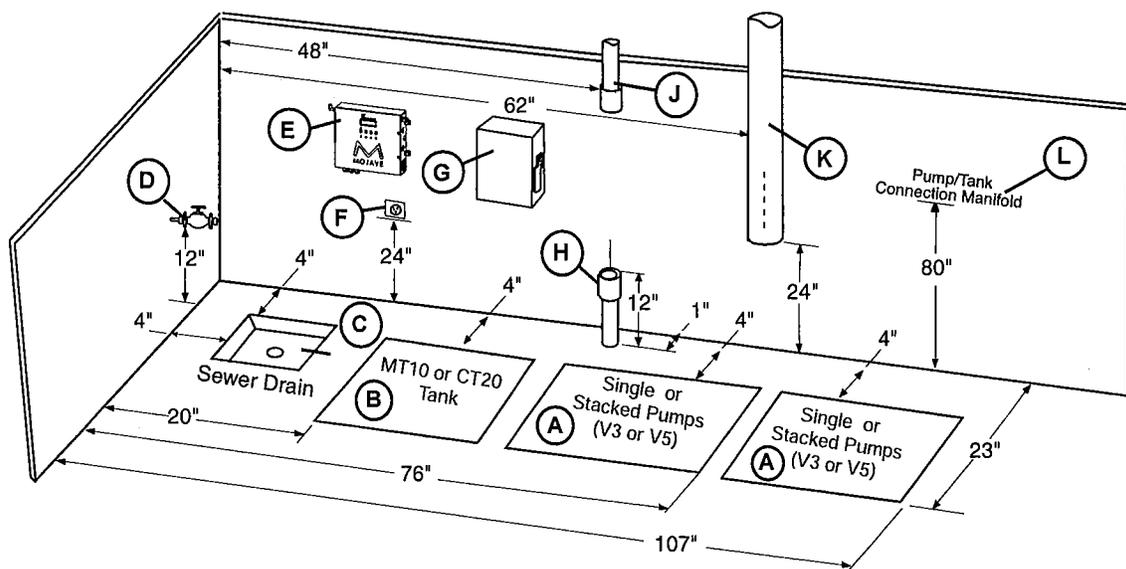


Installation Notes.

- A. **PUMP INSTALLATION SPACE** - Area for stacked V3 or V5 pumps in typical side by side installations. Only stack up to 2 pumps in one area.
- B. **TANK INSTALLATION SPACE** - Area for MT10 or CT20 tank in typical side by side installations. Never install the CT20 tank on top of a pump.
- C. **SEWER DRAIN** - Provide a drain for the removal of waste liquids from the MOJAVE tank. Use an open drain pipe (1 1/2" inch P-Trap with 1 inch air gap or floor sink) or a closed vented drain. See detail 1.
- D. **TANK WASHOUT** - Provide a water source terminated with a 1/2 inch FNPT shut-off valve providing water pressure between 20 and 100 psi for daily tank washout. Valve location must be no more than 10 feet from the tank installation to allow connection of supplied 10-foot 3/8-inch Poly tubing to the tank washout port. Provisions for backflow prevention may be required. Check local code requirements.
- E. **MASTER CONTROLLER UNIT** - Locate near pump and also allow a space around the Master Controller of at least 4 inches for the connection of wiring and the line cord during installation and servicing.
- F. **MASTER CONTROLLER ELECTRIC OUTLET** - Master Controller requires a dedicated standalone 120V, hospital grade grounded receptacle. The supplied 10-foot line cord is the Mains disconnect device for the unit.
- G. **PUMP ELECTRIC SERVICE** - Each Mojave pump is wired directly with a dedicated 220V, 20 AMP, single phase 60 Hz circuit. If Main Circuit panel is not located in equipment room, a disconnect box with approved ground is needed for each pump. Disconnect boxes should be mounted no more than 3 feet of each other and 3 feet of installation center line.
- H. **SUB FLOOR INSTALLATION VACUUM LINE** - See Plumbing Requirements for connection to tank inlet via supplied hose.
- J. **OVERHEAD INSTALLATION VACUUM LINE** - See Plumbing Requirements for connection to tank inlet via supplied hose.
- K. **HEAT EXHAUST** - See Plumbing Requirements for the exhaust vent line required for specific Mojave configurations. Use metal pipe on systems whenever the Heat Exchanger is removed. Schedule 40 pipe can normally be used on typical Mojave configuration installations with a Heat Exchanger. When installing two pumps, a reducing Y adapter (shown by detail 2 above) is needed to connect both vent tubes to a common 3-inch exhaust vent line.
- L. **PUMP/TANK MANIFOLD** - User fabricated to connect 3 or 4 pumps to a tank. Used with 3V5 and 4V5 systems. See Pump/Tank Connection Manifold.

Figure 4. V3, 2V3, 2V3CT, V5, 2V5, 2V5CT, 3V5 and 4V5 System Floor Plan

MOJAVE SYSTEM CONFIGURATIONS


Important: Side by side installation of pump and tank is preferred.
 Stack a MT10 tank on top of one V3 or V5 pump only if space is a problem.
 V3 or V5 pumps should only be stacked two high in all other system configurations as shown.
 All units are shipped with leveling feet set to lowest position.

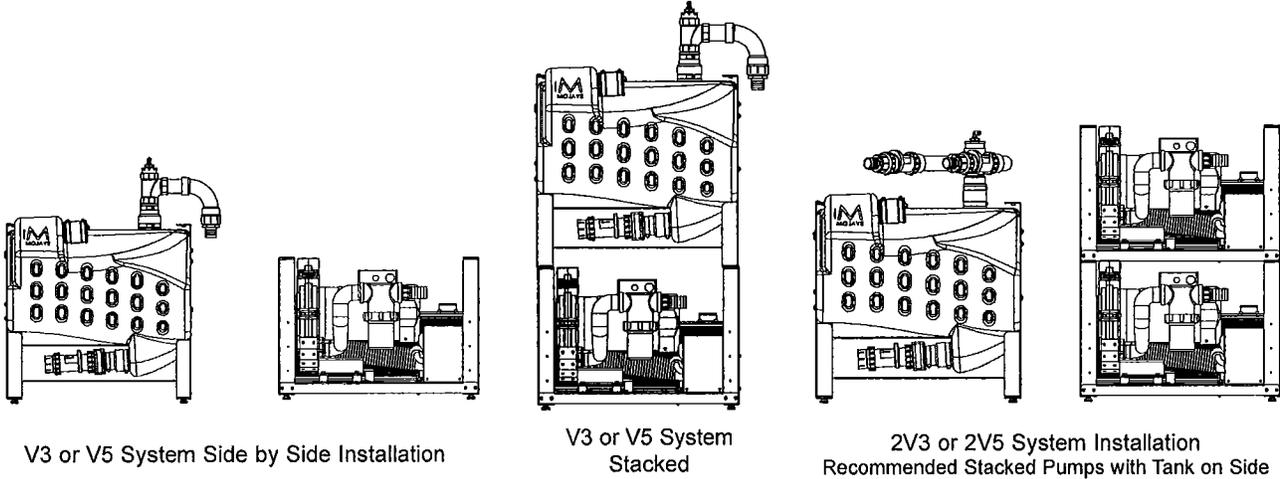

V3 or V5 System Side by Side Installation

V3 or V5 System Stacked


2V3 or 2V5 System Installation
 Recommended Stacked Pumps with Tank on Side

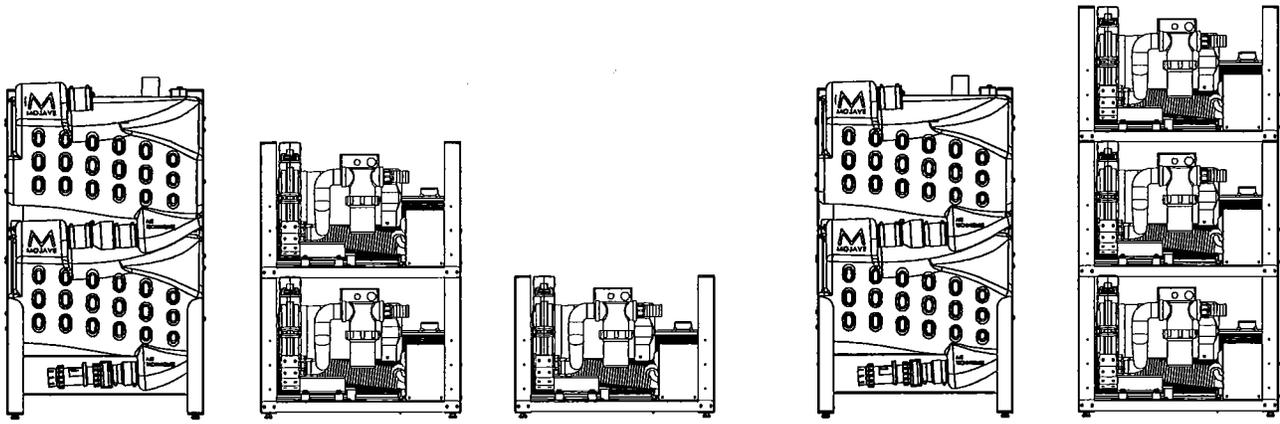

Recommended One Pump, a Stack of two Pumps & a CT20 Tank

Alternate Stack Three Pumps & a CT20 Tank
 (Use only to meet space requirements.)

3V5 System Installation

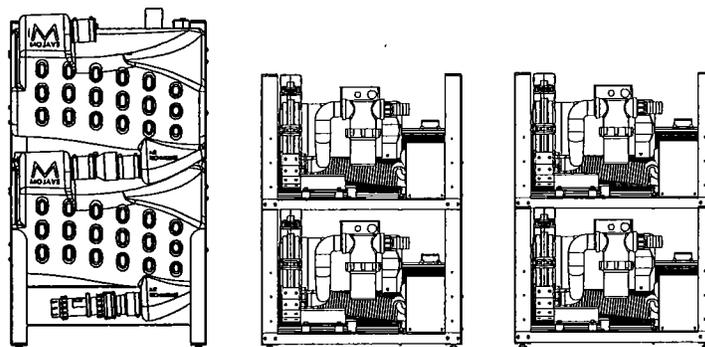

4V5 System Installation

Recommended Two Side by Side Stacks of Two Pumps and a CT20 Tank

Figure 5. MOJAVE System Configuration Layouts


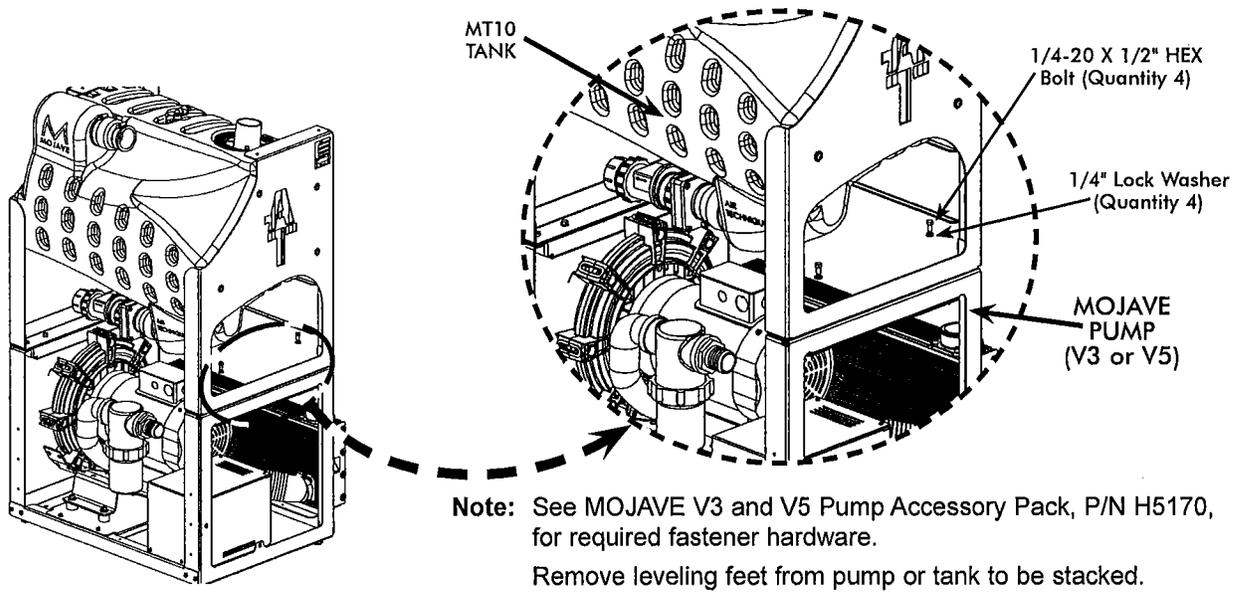


Figure 6. Stacking the MT10 Tank on Top of a MOJAVE Pump Hardware Detail

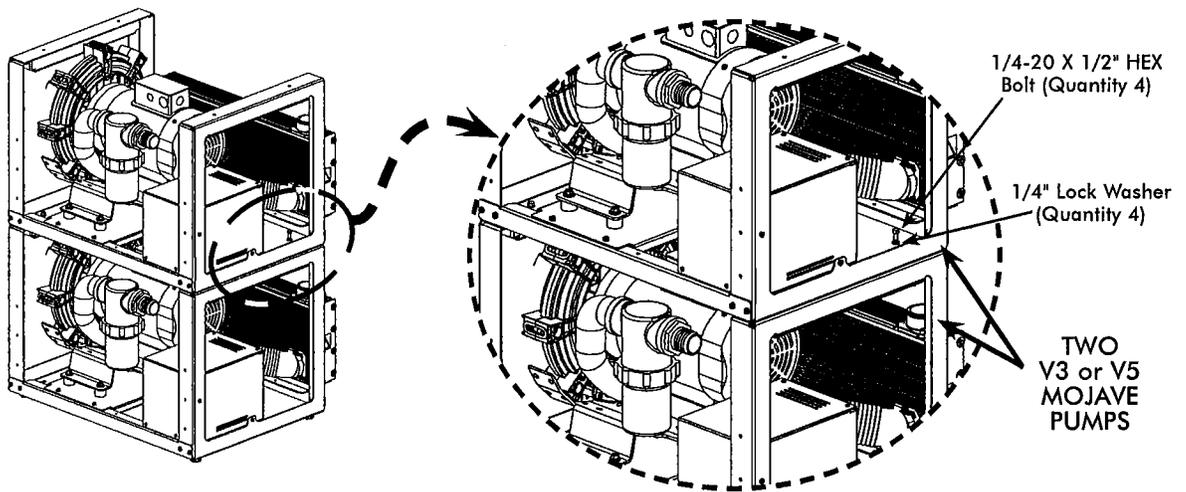

Note: See MOJAVE V3 and V5 Pump Accessory Pack, P/N H5170, for required fastener hardware.
Remove leveling feet from pump or tank to be stacked.

Figure 7. Stacking Two MOJAVE Pumps Hardware Detail

INSTALLATION

V3 and V5 System Installation.

Note: Each kit provides the required hoses, clamps and adapters.
No schedule 40 PVC pipe is included.

Installation Accessory Packs. Figure 8, sheet 1 and 2 show the hose connections required for all V3 and V5 **MOJAVE** System configuration installations using accessory packs that provide the required hoses, clamps and adapters as follows:

- ❑ **MOJAVE V3 and V5 Pump Accessory Pack, P/N H5170** - supplied with each pump and is used as follows.
 - Secure the MT10 Tank on top of the associated **MOJAVE** pump as shown by Figure 6.
 - Connect the pump to the facility vent line, connection item (3) on Figure 8, sheet 2.
- ❑ **MT10 Tank Accessory Pack, P/N H5210** - used to make the following connections:
 - Between the suction line and tank inlet. Item (1) on Figure 8, sheet 1.
 - Between the tank air outlet and pump inlet. Item (2) on Figure 8, sheet 1.
 - Install a drip leg to the facility vent line, connection item (4) on Figure 8, sheet 2.
 - The tank outlet drain to the facility sewer drain. Item (5) on Figure 8, sheet 2.
 - The washout port to the water shutoff valve. Item (6) on Figure 8, sheet 2.

Accessory Pack Supplied Components. The supplied components of accessory packs (P/Ns H5170 & H5210) are listed below. Verify that all listed items were received. If any item is missing, notify your dealer.

V3 and V5 Pump Accessory Pack, P/N H5170

Part No.	Description	Qty
56057	Vent Hose, 2-1/4" ID X 17" Long 1" W Cuff	1
89324	Hose Clamp 1-9/16"- 2-1/2" Maximum	2
57169	Hose Clamp 1.31 - 2.25 Diameter	2
419342	10 Foot CAT5e Network Cable	1
30914	Bolt 1/4-20 X 1/2, HEX Head,18-8	4
30958	1/4" Flat Washer	4
30920	1/4" Split Lock Washer	4

MT10 Tank Accessory Pack, P/N H5210

Part No.	Description	Qty
54521	1 1/2" ID, Clear Hose with Blue Helix 10 FT	1
57253S	Connector Adapter, 1 1/2" MNPT X 1 1/2" Barb	3
57169	Hose Clamp 1.31 - 2.25 Diameter	3
H5206	Tank Outlet Assembly; Single Pump	1
51453	Urethane Tubing, 1/4 OD 15 FT	1
54434	Connector Adapter, 1 1/2" SPG X 1 1/2" FNPT	1
H5207	Drip Leg Assembly	1
H5159	2" Flexible Coupling Connector	1

Installation Setup. Installation of a V3 and V5 **MOJAVE** System configuration consists of placing the equipment in the proper installation space and making connections between a MT10 tank and a V3 or V5 pump.

1. Refer to Figures 4 and 5 and determine the installation footprint dimensions and connection requirements. Place the tank and pump in position as shown by Figure 4.
2. If installing side-by-side configuration, proceed to step 4. If stacking, perform step 3.
3. When stacking the MT10 tank on top of a pump, refer to Figure 6 and secure the tank to pump using hardware supplied by the Pump Accessory Pack, P/N H5170. When stacking any **MOJAVE** system component, make sure to secure installation with the wall mount bracket kit available from your dealer.

Note: If more than 10 feet of the 1 1/2" ID, Clear Hose hose is needed, order P/N 54521 (order by the foot)

4. Measure and record distance between each connection point. Cut the supplied hose to the length required for each connection.

V3 and V5 Connection Procedure. Using industry standard techniques, make the connections between the tank and pump with supplied components of accessory packs (P/Ns H5170 & H5210). Refer to Figure 8, sheets 1 and 2 for the connection diagram and perform the following procedure.

1. **Suction Line to Tank Inlet Connection.** Refer to Figure 8, item (1) .
 - a. Install one connector adapter (P/N 57253S) to the pipe from the operator.
 - b. Install the connector adapter (P/N 54434) into the flexible coupling connector on the tank. Screw the barb side of the adapter (P/N 57253S) into the FNPT side.
 - c. Install the 1½" ID, clear hose (P/N 54521) cut for installation between the operator suction line and tank inlet and secure with two hose clamps (P/N 57169).

Note: If more than 15 feet of the 1/4 inch OD Urethane Tubing is needed, order P/N 51453 for additional 15 foot lengths.

2. **Tank Air Outlet to Pump Inlet Connection.** Refer to Figure 8, item (2) .
 - a. Install the Single Pump Tank Outlet Assembly (P/N H5206) onto the tank outlet port and secure with the two hose clamps. The outlet assembly is provided with MT10 Tank Accessory Pack (P/N H5210).
 - b. Connect 1 ½" ID, clear hose (P/N 54521) cut for installation between the barb connectors of the Single Pump Tank Outlet Assembly and pump air inlet filter. Secure with two hose lamps (P/N 57169).
 - c. Install a length of 1/4 inch OD Urethane Tubing (P/N 51453) between the vacuum sample port and the vacuum inlet port of the Master Controller. See Figure 8, item (2a.)

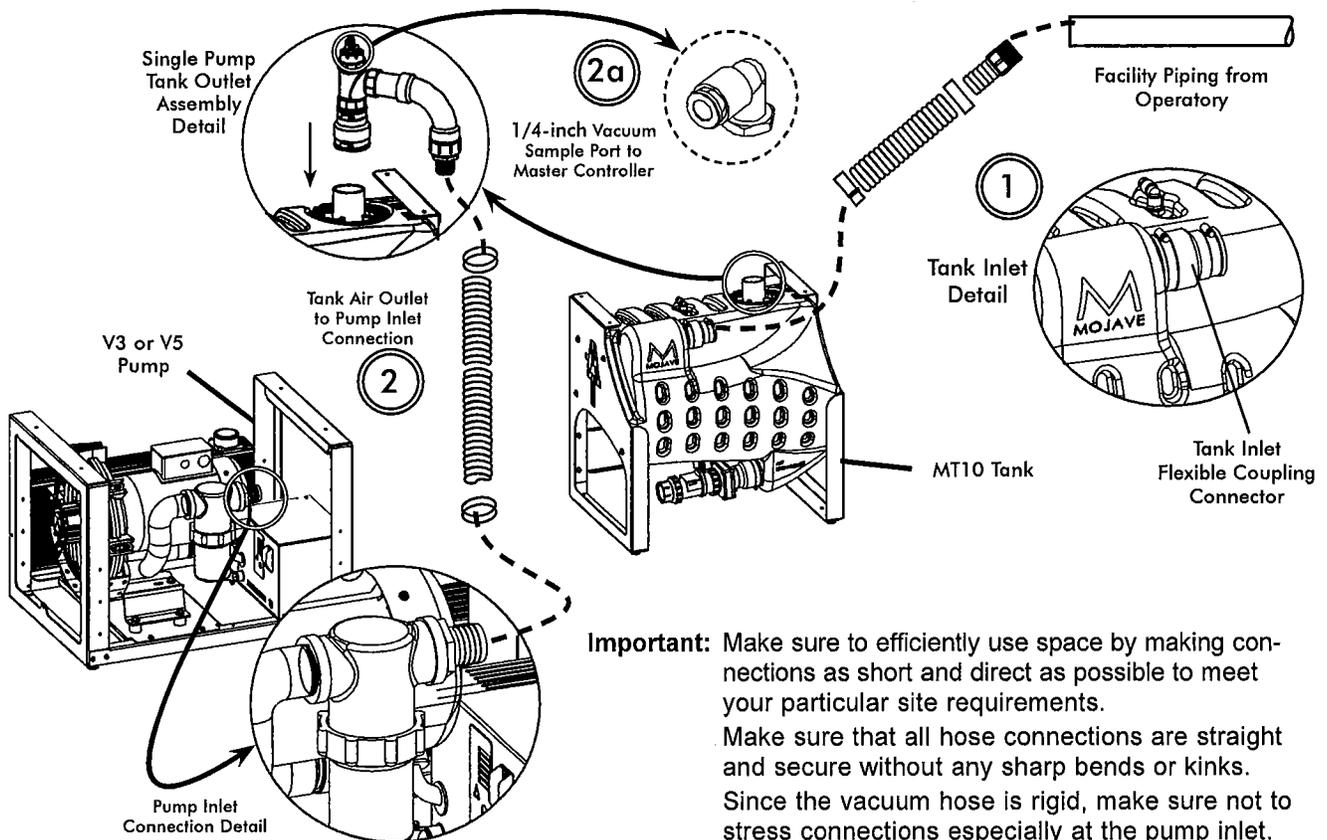


Figure 8. MOJAVE V3/V5 Pump and MT10 Tank Connection Diagram, Sheet 1

INSTALLATION

3. **Heat Exhaust Vent Connection.** Refer to Figure 8, item (3) and connect the vent hose (P/N 56057) between the pump heat exchanger and the facility vent line. Secure with two hose clamps (P/N 89324).
4. **Drip Leg Assembly Installation.** Using the 2 inch flexible coupling connector (P/N H5159) supplied, install the Drip Leg Assembly (P/N H5207) to the bottom end of the facility vent line. Install a length of 1/4 inch OD Urethane Tubing (P/N 51453) between the drip leg and facility sewer drain. See Figure 8, item (4).
5. **Tank Drain to Facility Sewer Connection.** Install the last connector adapter (P/N 57253S) to the tank outlet drain. Connect the last section of 1 1/2" ID, clear hose cut for installation to the adapter. Secure with one 1-9/16"- 2-1/2" diameter hose clamp (P/N 57169). Connect unconnected hose end to the facility sewer drain as necessary. See Figure 8, item (5).
6. **Tank Washout Port to Facility Water Connection.** Refer to Figure 8, item (6) and install a length of 3/8 inch tubing (P/N 19271) between the washout port and the water shutoff valve. The tubing is provided with Mojave Master Controller Accessory Kit (P/N H5131).
7. **Master Controller Installation.** Refer to the installation procedure on the next page and mount the Master Controller to the equipment room wall.
8. **System Electrical Connections.** Refer to the Electrical Connections section and connect the pump and Master Controller to facility power.

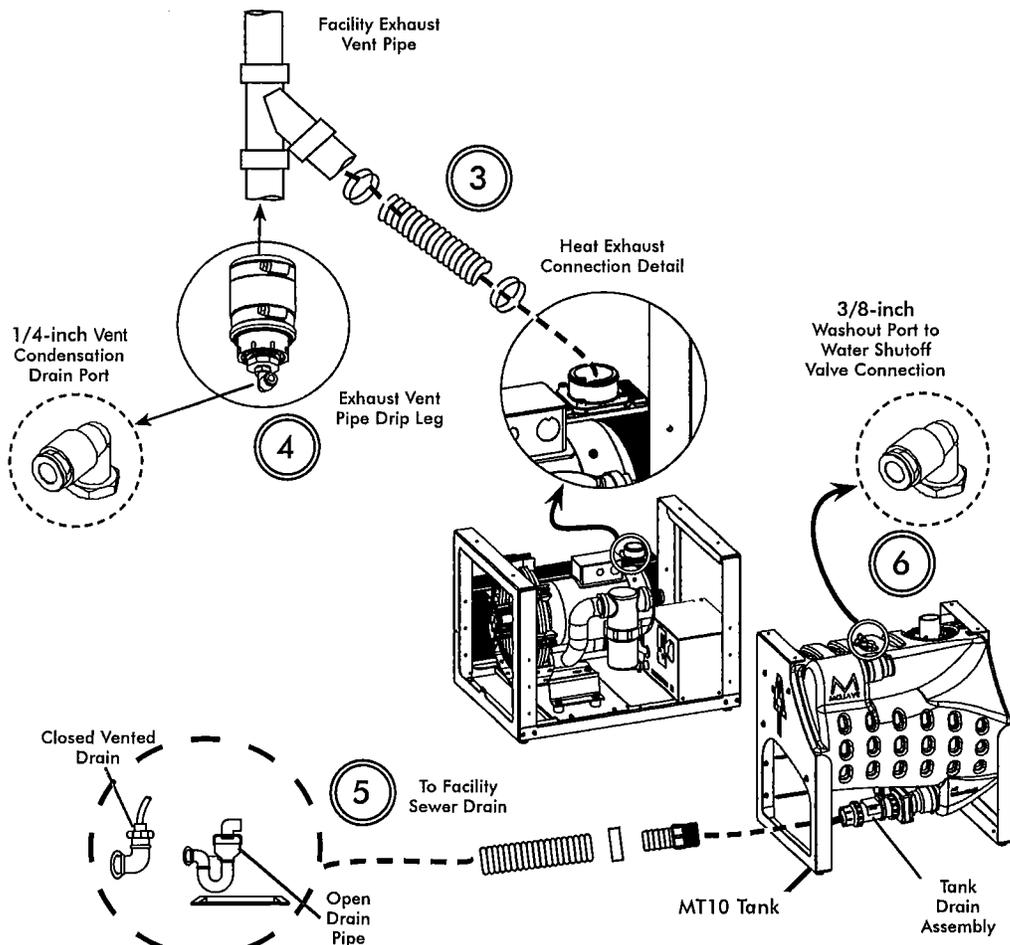


Figure 8. MOJAVE V3/V5 Pump and MT10 Tank Connection Diagram, Sheet 2

Master Controller Installation. The Master Controller is mounted on the equipment room wall between the facility water supply and the associated tank (MT10 or CT20). The water connection at the washout solenoid, electrical and vacuum connections must also be made at the unit. Review the important considerations listed below and install the Master Controller:

1. Locate the Master Controller near the pump and allow a space around the Master Controller of at least 4 inches for the connection of wiring and the line cord during installation and servicing.
2. To avoid electrical shorting from dripping water, always make sure to install the Master Controller above the facility water supply line.
3. The pump is turned ON from either the Primary Pump Local ON/OFF Switch located on the Master Controller or from a remote location with the optional Remote Control Panel Switch.
4. Use standard industry guidelines for working with electrical circuits, plumbing and on electronic equipment as necessary.
5. Make sure to efficiently use space by making connections as short and direct as possible to meet your particular site requirements.
6. Each CAT 5 Cable used to connect the Master Controller and associated Pump is 10 feet long.

Accessory Pack Supplied Components. The supplied components of accessory pack (P/N H5131) is listed below. Verify that all listed items were received. If any item is missing, notify your dealer.

Mojave Master Controller Accessory Kit, P/N H5131

Part No.	Description	Qty
77243	Line Cord 10 FT, 18 GA., IEC X North America, Hospital Grade	1
H5130	Tank Washout Solenoid Assembly; 1/2" NPT, 115VAC	1
19271	Poly Tubing, 3/8" OD 10 FT	1
30936	Plastic Screw Anchor, #10-12 X 1" , RAWL#7579	4
30295	#10 X 3/4, Type A, Plated Slot Pan Head Screw	4
30711	10-24 X 1/2, T- Form, Plated HEX Wash Head Screw	2
56194	Connector Adapter, 1/2 MNPT X 3/8 PUSH: SMC# KQ2H11-37S	1

Master Controller with Washout Solenoid Wall Mounting. Using the fastener hardware (P/Ns 30936, 30295 & 30711) from the Master Controller Accessory Kit, P/N H5131, secure the Master Controller assembly Washout Solenoid to the equipment room wall.

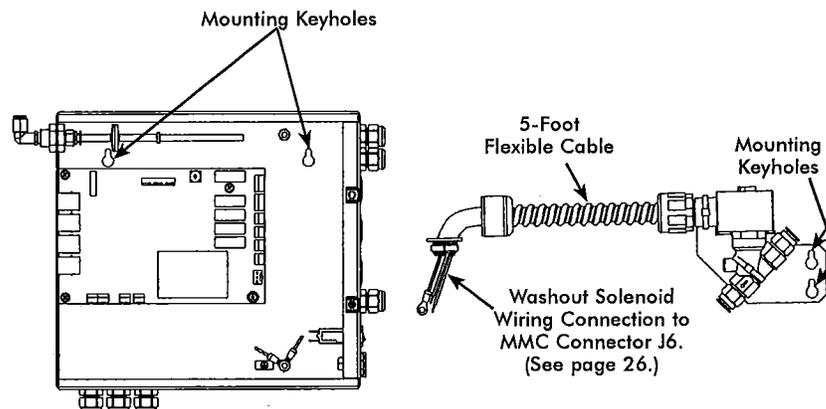


Figure 9. MOJAVE Master Controller and Washout Solenoid Mounting

INSTALLATION

2V3, 2V3CT, 2V5 and 2V5CT System Installations.

Note: Each kit provides the required hoses, clamps and adapters.
No schedule 40 PVC pipe is included.

Installation Accessory Packs. Figure 10 shows the hose connections required for all dual V3 and V5 **MOJAVE** System configuration installations using accessory packs that provide the required hoses, clamps and adapters as follows:

- ❑ **MOJAVE V3 and V5 Pump Accessory Pack, P/N H5170** - supplied with each pump and is used as follows.
 - Stack the associated **MOJAVE** pumps as shown by Figure 7.
 - Connect each pump to the facility vent line, connection item (3) on Figure 10, sheet 2.
- ❑ **MT10 Tank Accessory Pack, P/N H5210** - used to make the following connections:
 - Between the suction line and tank inlet. Item (1) on Figure 10, sheet 1.
 - Install a drip leg to the facility vent line, connection item (4) on Figure 10, sheet 2.
 - The tank outlet drain to the facility sewer drain. Item (5) on Figure 10, sheet 2.
 - The washout port to the water shutoff valve. Item (6) on Figure 10, sheet 2.
- ❑ **MOJAVE Dual System Installation Kit, MIK2** - used to make the following connections:
 - Between the tank air outlet and each pump inlet. Item (2) on Figure 10, sheet 1.

Supplied Components. The supplied components of the Dual System Installation Kit (P/N MIK2) are listed below. The supplied components of accessory packs(P/Ns H5170 & H5210) are provided on page 16. Verify that all listed items were received. If any item is missing, notify your dealer.

Mojave Dual System Installation Kit, MIK2

Part No.	Description	Qty
H5176	Tank Outlet Assembly; Dual Pump Installation	1
54521	1 ½" ID, Clear Hose with Blue Helix 6 FT	1
54512	2" ID, Clear Hose with Blue Helix 4 FT	1
H5159	2" Flexible Coupling Connector	2

Installation Setup. Installation of a dual pump **MOJAVE** System configurations consist of placing the equipment in the proper installation space and making connections between a tank and pump.

1. Refer to Figures 4 and 5 and determine the installation footprint dimensions and connection requirements. Place the tank and pumps in position as shown by Figure 4.
2. If installing side-by-side configuration, proceed to step 4. If stacking, perform step 3.
3. When stacking pumps, refer to Figure 6 and secure the pumps using hardware supplied by the Pump Accessory Pack, P/N H5170. When stacking any system component, make sure to secure installation with the wall mount bracket kit available from your dealer.

Note: If more than 10 feet of the 1 ½" ID, Clear Hose hose is needed, order P/N 54521 (order by the foot)

4. Measure and record distance between each connection point. Cut the supplied hose to the length required for each connection.

2V3, 2V3CT, 2V5 and 2V5CT Connection Procedure. Using industry standard techniques, make the connections between the tank and pumps with supplied components of accessory packs (P/Ns H5170 & H5210) and Dual System Installation Kit (P/N MIK2). Refer to Figure 10, sheets 1 and 2 for the connection diagram and perform the following procedure.

1. **Suction Line to Tank Inlet Connection.** Refer to Figure 10, item (1) .
 - a. Install 2" flexible coupling connector (P/N H5159) to the pipe from the operator.
 - b. Replace the reducing flexible coupling connector on the tank with 2" flexible coupling connector (P/N H5159) provided in the Dual System Installation Kit.
 - c. Install the 2" ID, clear hose (P/N 54512) between the operator suction line and tank inlet and secure with 2" flexible coupling connector (P/N H5159)

Note: If more than 15 feet of the 1/4 inch OD Urethane Tubing is needed, order P/N 51453 for additional 15 foot lengths.

2. **Tank Air Outlet to Pump Inlets Connection.** Refer to Figure 10, item (2) .
 - a. Install the Dual Pump Tank Outlet Assembly (P/N H5176) onto the tank outlet port and secure with the two hose clamps. The outlet assembly is provided with Dual System Installation Kit (P/N MIK2).
 - b. Connect 1 1/2" ID, clear hose (P/N 54521) cut for installation between the barb connectors of the Dual Pump Tank Outlet Assembly and the air inlet filter of each pump. Secure with two hose lamps (P/N 57169).
 - c. Install a length of 1/4 inch OD Urethane Tubing (P/N 51453) between the vacuum sample port and the vacuum inlet port of the Master Controller. See Figure 10, item (2a.)

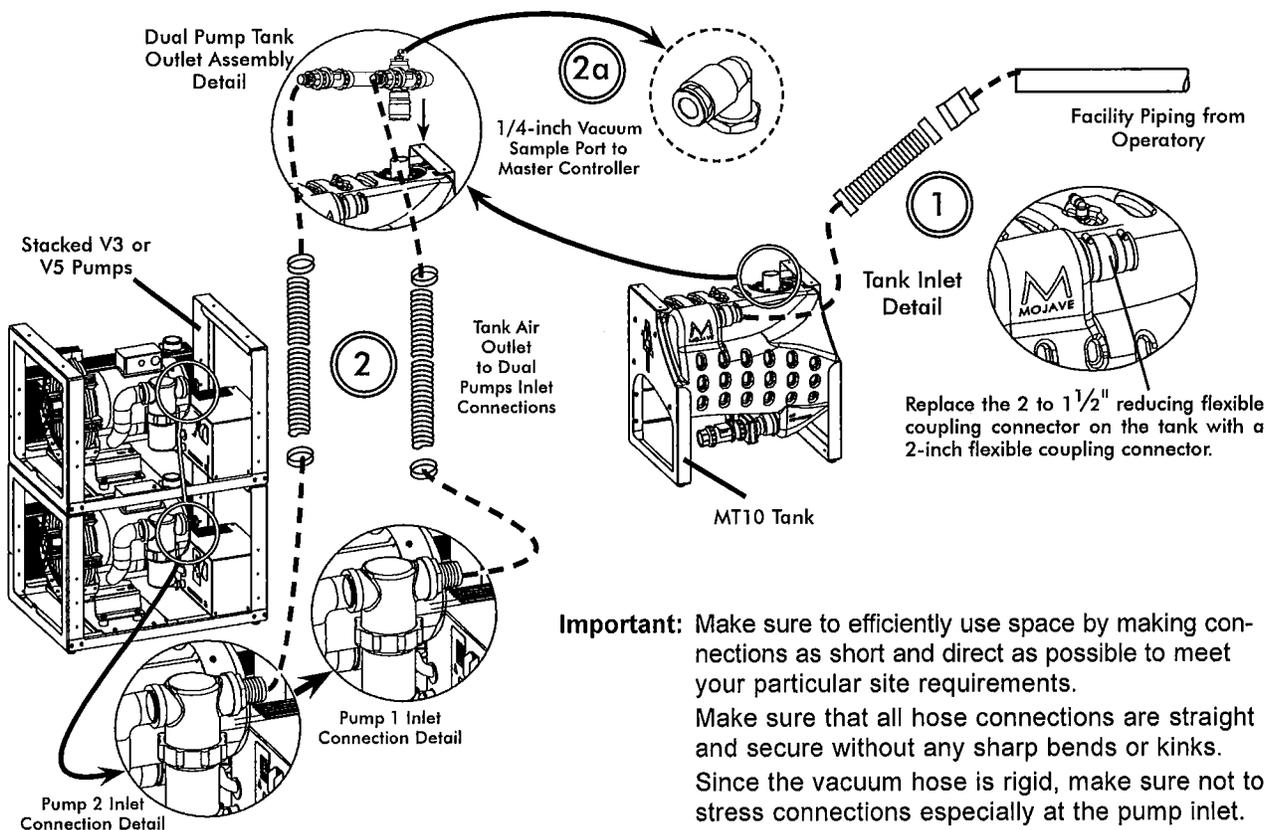


Figure 10. MOJAVE Dual Pump and Tank Connection Diagram, Sheet 1

INSTALLATION

3. **Heat Exhaust Vent Connection.** Refer to Figure 9, item (3) and connect the vent hose (P/N 56057) between the pump heat exchanger and the facility vent line. Secure with two hose clamps (P/N 89324).
4. **Drip Leg Assembly Installation.** Using the 2 inch flexible coupling connector (P/N H5159) supplied, install the Drip Leg Assembly (P/N H5207) to the bottom end of the facility vent line. Install a length of 1/4 inch OD Urethane Tubing (P/N 51453) between the drip leg and facility sewer drain. See Figure 10, sheet 2, item (4).
5. **Tank Drain to Facility Sewer Connection.** Install the last connector adapter (P/N 57253S) to the tank outlet drain. Connect the last section of 1 1/2" ID, clear hose cut for installation to the adapter. Secure with one 1-9/16"- 2-1/2" diameter hose clamp (P/N 57169). Connect unconnected hose end to the facility sewer drain as necessary. See Figure 9, item (5).
6. **Tank Washout Port to Facility Water Connection.** Refer to Figure 9, item (6) and install a length of 3/8 inch tubing (P/N 19271) between the washout port and the water shutoff valve. The tubing is provided with Mojave Master Controller Accessory Kit (P/N H5131).
7. **Master Controller Assembly Installation.** Refer to the installation procedure on the next page and mount the Master Controller assembly to the equipment room wall.
8. **System Electrical Connections.** Refer to the Electrical Connections section and connect each pump and Master Controller to facility power.

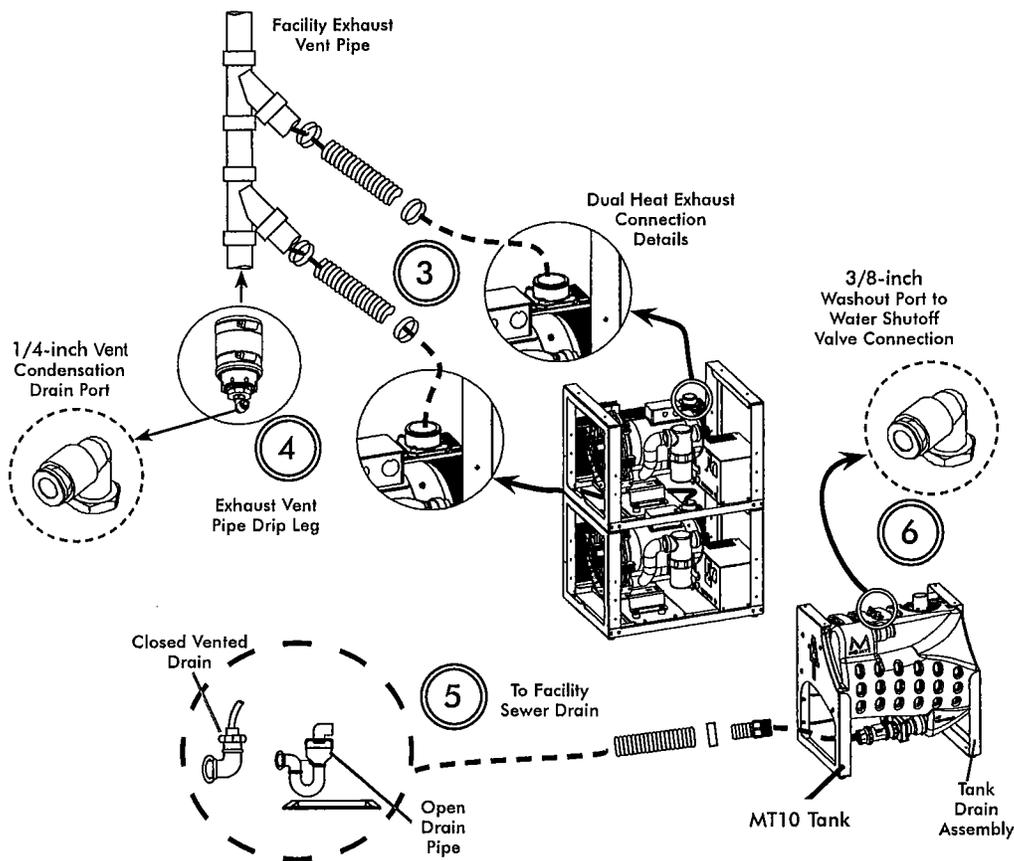


Figure 10. MOJAVE Dual Pump and Tank Connection Diagram, Sheet 2

3V5 and 4V5 System Installations.

Note: Each kit provides the required hoses, clamps and adapters.
No schedule 40 PVC pipe is included.

Installation Accessory Packs. Figures 11 through 13 shows the hose connections required for 3V5 and 4V5 **MOJAVE** System configuration installations using accessory packs that provide the required hoses, clamps and adapters as follows:

- ❑ **MOJAVE V3 and V5 Pump Accessory Pack, P/N H5170** - supplied with each pump and is used as follows.
 - Stack the associated **MOJAVE** pumps as shown by Figure 7.
 - Connect each pump to the facility vent line, connection item (3) on Figure 10, sheet 2.
- ❑ **MT10 Tank Accessory Pack, P/N H5210** - used to make the following connections:
 - Between the suction line and tank inlet. Item (1) on Figure 10, sheet 1.
 - Install a drip leg to the facility vent line, connection item (4) on Figure 10, sheet 2.
 - The tank outlet drain to the facility sewer drain. Item (5) on Figure 10, sheet 2.
 - The washout port to the water shutoff valve. Item (6) on Figure 10, sheet 2.
- ❑ **MOJAVE Triple & Quad System Installation Kit, MIK4** - used to make the connections between a CT20 tank and three or four V5 pumps.

Supplied Components. The supplied components of the Triple and Quad System Installation Kit (P/N MIK4) are listed below. The supplied components of accessory packs (P/Ns H5170 & H5210) are provided on page 16. Verify that all listed items were received. If any item is missing, notify your dealer.

Mojave Triple & Quad System Installation Kit, MIK4

54129	Check Valve Assembly	4
54512	2" ID, Clear Hose with Blue Helix 4 FT	1
H5159	2" Flexible Coupling Connector	2
54521	1 ½" ID, Clear Hose with Blue Helix 20 FT	1

Installation Setup. Installation of a Triple and Quad **MOJAVE** System configurations consist of placing the equipment in the proper installation space, fabricating a Pump/Tank Connection Manifold and making connections between a tank and pump.

1. Refer to Figures 4 and 5 and determine the installation footprint dimensions and connection requirements. Place the tank and pumps in position as shown by Figure 4.
2. If installing side-by-side configuration, proceed to step 4. If stacking, perform step 3.
3. When stacking pumps, refer to Figure 7 and secure the pumps using hardware supplied by the Pump Accessory Pack, P/N H5170. When stacking any system component, make sure to secure installation with the wall mount bracket kit available from your dealer.

Note: If more than 20 feet of the 1 ½" ID, Clear Hose hose is needed, order P/N 54521 (order by the foot)

4. Measure and record distance between each connection point. Cut the supplied hose to the length required for each connection.

INSTALLATION

Connection Procedure. Installation of the triple and quad **MOJAVE** model configurations consist of making connections between a CT20 tank and three or four V5 pumps. In any case, the hose connections between the suction line and tank, the tank and drain line and pump to the facility vent line are identical as shown by Figures 6. Use the **4V5 MOJAVE** Accessory Kit to connect the V5 pumps together for connection to the tank as shown by Figures 12 and 13. Refer to Figures 4 through 13 and perform the following procedure.

1. Fabricate a Pump/Tank Connection Manifold (as shown by Figure 10) using check valves supplied in associated accessory Kit
2. Refer to Figures 4 and 5 and determine the installation footprint dimension and connection requirements. Place the CT20 tank and V5 pumps in position.
3. Using Figure 7 as a guide, stack and secure the pumps together using supplied hardware.
4. Measure and record distance between each connection point as shown in the corresponding connection detail diagram (Figures 12 and 13).
5. Cut the supplied hose to the length required for each connection.
6. Using industry standard techniques, install pipe to hose adapters as shown in the corresponding connection detail diagram (Figures 12 and 13).
7. Install hoses and secure with associated clamps.
8. Use a reducing Y or tee adapter to connect each pump vent tube to the common 4-inch exhaust vent line.

INSTALLATION

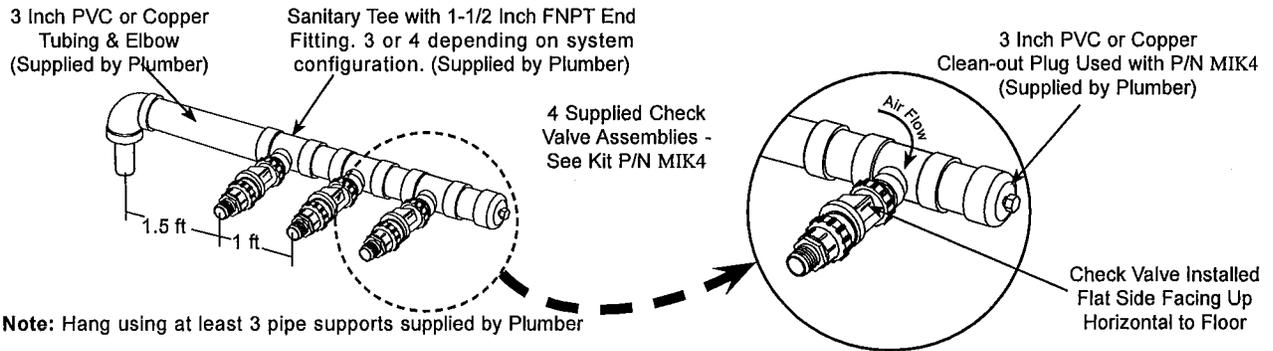


Figure 11. Pump/Tank Connection Manifold Using Accessory Kit

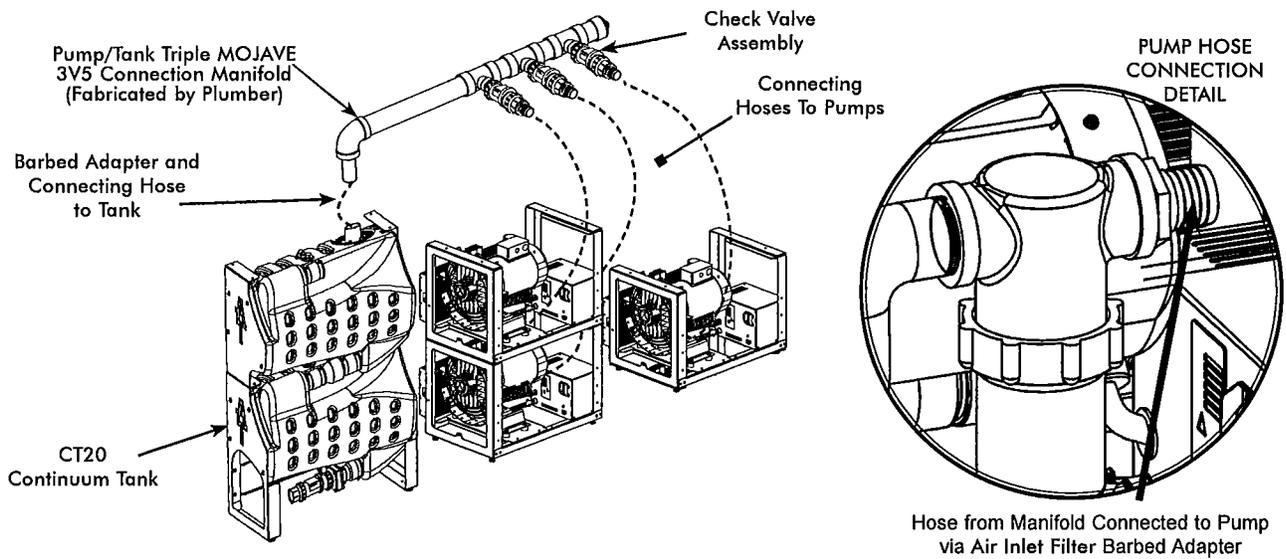


Figure 12. 3V5 System Connection Detail Using Accessory Kit

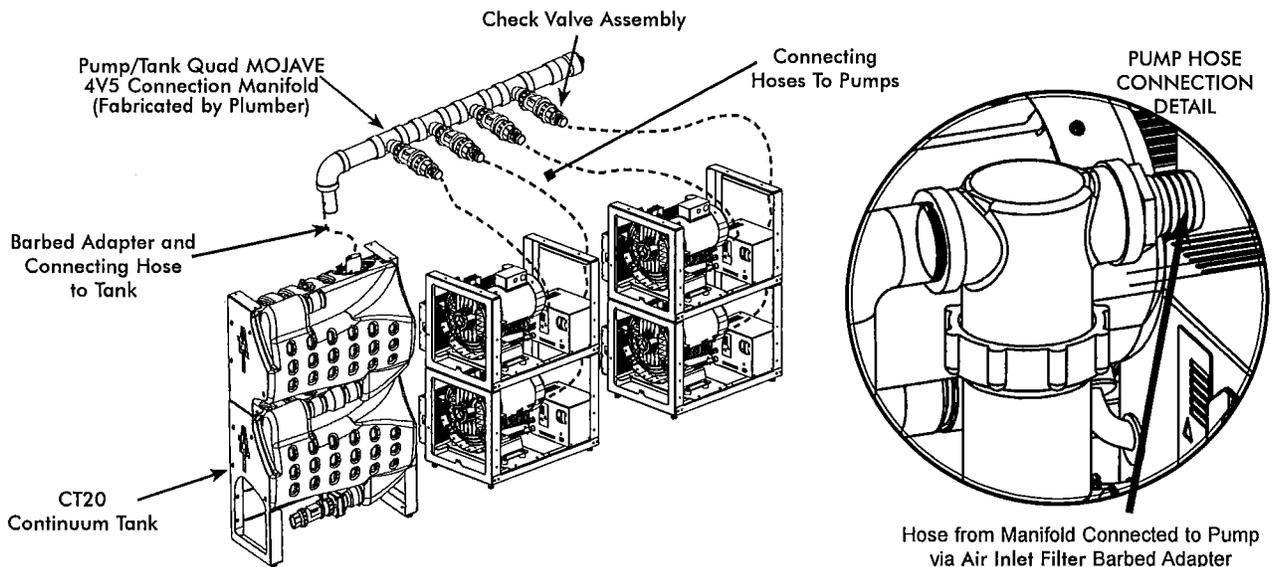


Figure 13. 4V5 System Connection Detail Using Accessory Kit

ELECTRICAL CONNECTIONS

 Remove all power to the system prior to working within the electrical box. Contacting high voltage can cause serious injury or even death.

 All systems must be wired directly from an electrical box that complies with local electrical codes.

MOJAVE Pump Direct Handy Box Power Connection.

Each pump is wired directly to an dedicated 230V, 20 AMP single phase 60 Hz circuit via a disconnect box with approved ground. Disconnect boxes should be mounted no more than 3 feet of each other and 3 feet of installation centerline.

Figure 14 shows the wiring of the electrical box used to connect each pump directly to facility input power.


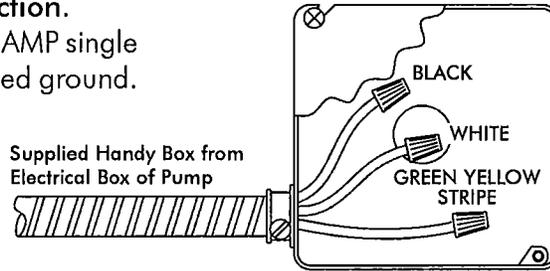


Figure 14. MOJAVE Pump Power Connection

Master Controller Connections. The Master Controller is connected to a dedicated 120V, hospital grade grounded receptacle using a supplied Hospital Grade line cord. Refer to Figure 15 with associated connection list and make the necessary connections required for your specific **MOJAVE** system.

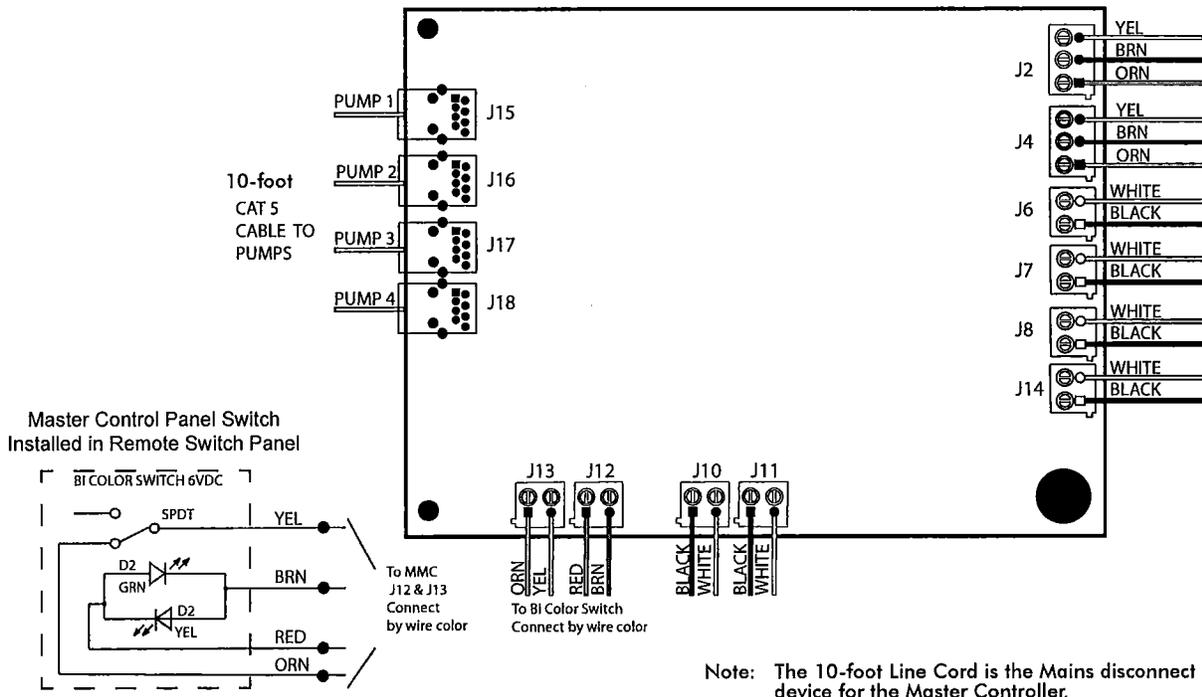

Connector	Function	Connector	Function
J2	Main Water Panel Switch (optional)	J10	Float Switch Bottom of CT20 Tank
J4	Main Water Solenoid (optional)	J11	Float Switch Top MT10 Tank & CT20 Tank
J6	Washout Solenoid	J12	Master Control Panel Switch #53202-1
J7	Tank Solenoid (CT20 only)	J13	
J8	Air Solenoid (CT20 only)	J15 Thru J18	10-foot CAT 5 Cable to each Pump
J14	Drain Pump (optional)		

Figure 15. Master Controller Wiring Diagram


General.

- ❑ The vacuum level is factory preset at 8 inHg.
- ❑ System operation is automatically controlled via the Master Controller and the Variable Frequency Drive (VFD) of each pump.
- ❑ The system is capable of running continuously and may be turned OFF when not in use.
- ❑ Designation of the Primary Pump is cycled through all pumps in the system to evenly distribute run time across all pumps in the system.
- ❑ The system may be turned ON or OFF from a single, convenient location within the dental office using an optional Remote Control Panel switch.
- ❑ The default setting for the number of tanks is set at the factory as a Single Tank.
- ❑ Each tank has been designed to collect the fluids evacuated during a normal operating day.
- ❑ An internal float switch interrupts the pump operation and automatically drains the tank when an excessive amount of fluids are collected in the tank.
- ❑ All liquids drain from the separation tank when the power is turned OFF.

Pump Power On/Off Switch with Circuit Breaker.

As the Mains power disconnect of the associated pump, this combination switch and circuit breaker controls application of the connected input power and protects the pump from overloads and short circuits.

When set to the up (1) position, it applies input power to the internal VFD electronics and the associated pump and must be set in the up (1) position to allow the pump to operate via the Master Controller.

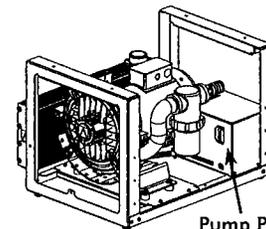

Pump Power On/Off
Switch and Circuit
Breaker

Activation. Whenever the Master Controller starts running, a system pump will start operation. The Master Controller state (Standby or Running) is controlled by either the local Pump ON/OFF switch located on the front panel or the Master Controller Remote Panel switch located on the optional remote panel. This first operating pump is designated the Primary Pump for the system. The selection of the Primary Pump changes among the available pumps each time the Master Controller is activated (Running). This cycling of the primary pump designation is designed to distribute the wear across all pumps of the system. The pump's VFD control the frequency of the active (primary) pump to maintain 8 inHg. If the system vacuum level falls below 7 inHg for 30 seconds the next pump in the series is automatically activated. Additional pumps are automatically turned on as necessary to maintain the vacuum level required for the dental office. Using this balanced system approach, each user has the vacuum level necessary to do the job while conserving electricity and prolonging the life of the pumps.

De-Activation. When the frequency of the Primary Pump is below 60 Hz for 30 seconds, the last pump turned ON shuts down. If this condition remains, then each additional pump in the system also is automatically turned OFF in the reverse order of their activation until only the Primary Pump is left operating.

Washout Cycle. A Washout Cycle is initiated 5 minutes after the system transitions into Standby. The Facility Main Water and the Washout Solenoid are then activated. The Washout Cycle will run for 2 minutes as long as the system remains in Standby. The Washout and Water Solenoids will be turned OFF, and not allowed to be turned ON again until after the system comes out of the Standby condition.

OPERATING INFORMATION

Master Controller Controls and Indicators. Figure 16 shows the front panel view of the Master Controller while the table on the next page lists the nomenclature and function of each front panel control, indicator and connector of the Master Controller.

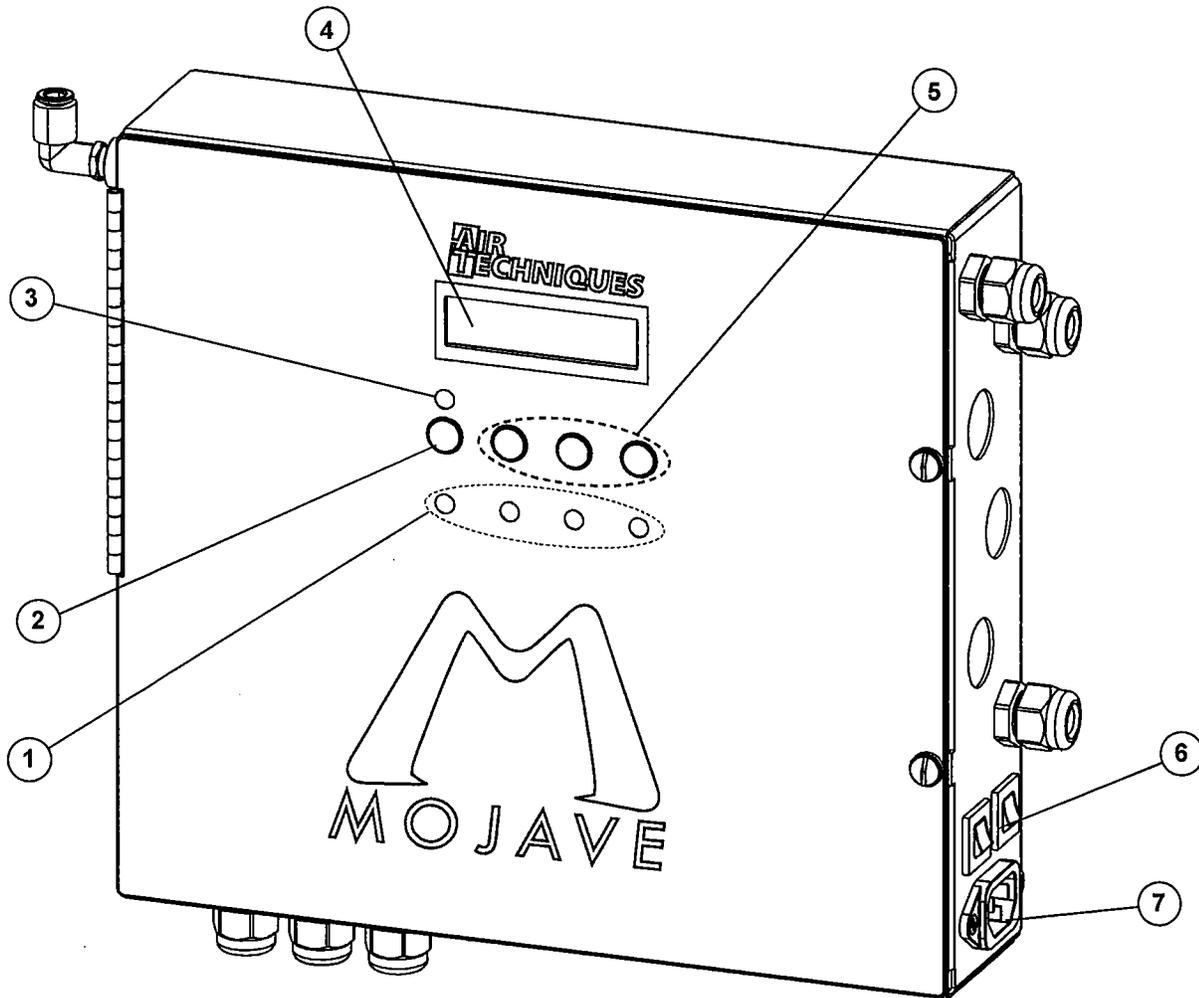


Figure 16. Master Controller Assembly Controls and Indicators

Master Controller Controls and Indicators

Item	Control/Indicator	Function
1	Pump Status Indicators (1 for each pump) <i>None</i> <i>Quick Flashing Green</i> <i>Solid Green</i> <i>Flashing Yellow</i>	Four bi-color Green/Yellow LED indicators that display the current status of each connected vacuum pump as follows: Pump cable is not connected Pump cable is connected on both ends Corresponding pump is operating (spinning) and no Error is Present Corresponding pump is not operating (not spinning) and an Error is Present
2	PUMP ON/OFF Button	A momentary tactile switch that toggles the Master Controller between Standby and Running. When the Master Controller is Running at least the primary pump is operating. (See Master Controller Status Indicator.)
3	Master Controller Status Indicator <i>None</i> <i>Quick Flashing Green</i> <i>Solid Green</i> <i>Solid Yellow</i> <i>Flashing Yellow</i> <i>Alternating Green/Yellow</i>	Bi-color Green/Yellow LED indicator that displays the current status of the Master Controller as follows: Module Has No Power Master Controller is in Standby (idle) Master Controller is Running (at least one Pump is operating) A Washout Cycle is Running A Washout Cycle is Running and an Error is Present Master Controller is Running and an Error is Present
4	LCD Display Panel <i>Normal Display Mode</i> <i>Menu Display Mode</i>	A 2 line by 16 Character LCD display with a white LED backlight that displays system operating and programming information as follows: Top left section shows temperature. Top right section displays vacuum pressure (InHg). The bottom line displays the currently selected sub-menu item Top LCD line displays the top level menu item and the bottom LCD line will display the sub-menu item. (See MENU, SCROLL and SELECT buttons.)
5	Menu Navigation Buttons <i>MENU Button</i> <i>SCROLL Button</i> <i>SELECT Button</i>	When pressed, the MENU , SCROLL and SELECT membrane buttons allow the navigation of the system menu displayed via the LCD Display. No activity for 5 seconds will put the display back into its Normal Display mode. Places system in Menu Display mode as described above. Also, when pressed further, advances to the next top level menu item with associated sub-menu items. Refer to the Menu Display Mode description provided on the next page. Scrolls thru the sub-menu items of the currently selected top level menu item. Selects the sub-menu item and then reverts back to the Normal Display mode.
6	Circuit Breakers	Two 5 Amp circuit breakers that protect the Master Controller from overloads and short circuits.
7	AC Power IEC Receptacle	Accepts supplied AC Line Cord connector to apply 120 VAC input power for operation of the Master Controller. The Line Cord is the Mains disconnect device for the Master Controller.

OPERATING INFORMATION

Normal Display Mode. The Normal Display Mode is the default view of the LCD Display Panel where the top line shows the PCB temperature on the left and system vacuum level on the right side. The the bottom line displays the currently selected sub-menu item.

Menu Display Mode. In Menu Display Mode, the top line shows the top level menu item while the bottom line displays the sub-menu item. See the table below for top and sub menu items. Navigation of the menu is accomplished as follows:

1. Pressing the MENU button advances to the next top level menu item and associated sub-menu items.
2. Pressing the SCROLL button scrolls thru the sub-menu items associated with the selected top level menu item.
3. Pressing the SELECT button Selects the sub-menu item and then reverts back to the Normal Display mode.

Menu Display Mode

Top-Menu Item	Sub-Menu Item	Description
Pump Frequency	Cycle	Cycles through all connected pump frequencies every 2 seconds.
	Pump #1	Shows the frequency of Pump #1
	Pump #2	Shows the frequency of Pump #2
	Pump #3	Shows the frequency of Pump #3
	Pump #4	Shows the frequency of Pump #4
Pump Run Time	Cycle	Cycles through all connected pump run times every 2 seconds.
	Pump #1	Shows the total Run Time of Pump #1
	Pump #2	Shows the total Run Time of Pump #2
	Pump #3	Shows the total Run Time of Pump #3
	Pump #4	Shows the total Run Time of Pump #4
Tank Config	Single Tank Dual Tank	MT10 Tank configuration CT20 Tank configuration
Reset All Errors	Hold Down Select	Hold Select button for 10 seconds to Reset all errors.

Initial System Startup. Start the MOJAVE system for the first time by referring to the Operating Information section and performing the following procedure.

Important: Make sure that each facility electrical disconnect box controlling the 230V, 20 AMP single phase 60 Hz circuit to the corresponding pump is set to the ON position.

1. Apply facility operating power to each pump by placing the Pump Power Switch with Circuit Breaker in the up (1) position.
2. Connect CAT5 cable between all pumps and Master Controller.
3. Connect the supplied line cord between the Mains (120 VAC) outlet and the AC Power IEC Receptacle of the Master Controller. The Master Controller is now in the Standby mode. Observe the following:
 - a. Master Controller Status Indicator **Quick Flashes Green** designating that the Master Controller is in Standby (idle).
 - b. LCD Display Panel is illuminated showing the default Normal Display Mode view.
 - c. Pump Status Indicator corresponding to the connected pump or pumps **Quick Flash Green** designating that the pumps are connected but not operating. Pump Status Indicators associated with no connected pump will be extinguished.
4. Start system operation by pressing the PUMP ON/OFF button located on the Master Controller. This places the Master Controller in the Running mode where at least one Pump is operating. Observe the following.
 - a. Master Controller Status Indicator illuminates **Solid Green** designating that the Master Controller is Running (at least one pump is operating in multi pump systems).
 - b. Pump Status Indicator associated with the operating pump illuminates **Solid Green** designating that a pump is operating (spinning) and no error is present.
5. Press the PUMP ON/OFF button to stop the pump operation and return the Master Controller to the Standby mode (idle). If operating a system with only one pump, proceed to step 6. When operating a multi pump system, repeat steps 3 and 4 for each pump and observe that the next pump in the system starts operation each time the PUMP ON/OFF button is pressed.

Important: The system default tank configuration setting is Single Tank, which must be changed to Dual Tank when using 2V3CT, 2V5CT, 3V5 or 4V5 systems requiring a CT20 tank.

6. Proceed to step 6 if the system has a MT10 tank. When using systems with a CT20 tank change the **Tank Config** as follows:
 - a. Navigate to the **Tank Config** top menu item by pressing the MENU button 3 times.
 - b. Press the SCROLL button to navigate to the **Dual Tanks** sub menu item.
 - c. Press the SELECT button to change the **Tank Config** to **Dual Tanks**.

Note: The optional Remote Control Panel switch may be used instead of the PUMP ON/OFF button.

Normal Operation. The MOJAVE system is normally operated by simply pressing the PUMP ON/OFF button located on the front panel of the Master Controller. This places the Master Controller in the Running mode to control system operation via the Variable Frequency Drive (VFD) electronics of each pump. During operation the controller automatically starts pump operation, adjusts the frequency of the pumps to maintain the required vacuum level as needed. Additionally the Master Controller constantly monitors the system operation status, performs self diagnostics and reports errors.

TROUBLESHOOTING

Automated Self Diagnostic Feature. Every 4 hours each pump in the system that is not ON will be turned ON for 6 seconds and then turned OFF, one at a time. By constantly checking the status of all pumps in the system this feature makes sure that each is ready for operation and may be helpful in preventing locked rotors.

Error Reporting. The Master Controller constantly monitors the system operation and immediately records and reports any errors found. Some errors clear automatically as soon as the operating issues are resolved; other errors have to be manually reset. The table below lists the types of errors reported along with their causes, affects on the system, and details on how the error can be reset.

Reported Error	Type	Cause	Observable Result	Reset Methods
Feedback Error	Pump	Feedback from a running Pump indicates a Frequency of <5 Hz 5 Seconds after being turned ON.	<ul style="list-style-type: none"> • This pump is shutdown • Error status is displayed 	<ul style="list-style-type: none"> • Automated Self Diagnostic Function • Disconnect Pump • Menu: Reset All Errors • Cycle MMC Power
Pump VFD Error	Pump	A Pump VFD has reported an error through its relay contact.	<ul style="list-style-type: none"> • This pump is shutdown • Error status is displayed 	<ul style="list-style-type: none"> • Automated, once the fault is diagnosed and resolved.
Control Error	Pump	A Pump is running that the Master Controller did not instruct to run.	<ul style="list-style-type: none"> • Error status is displayed 	<ul style="list-style-type: none"> • Automated, once the fault is diagnosed and resolved. • Disconnect Pump
Tank Error	System	A Float Switch has been tripped to prevent water from entering the Pumps.	<ul style="list-style-type: none"> • All running pumps are shutdown • Error status is displayed 	<ul style="list-style-type: none"> • Automated, after a 1 Minute "Active Drain" delay.
Op Temp Error	System	The PCB Temperature is above 104 °F or below 40 °F.	<ul style="list-style-type: none"> • Error status is displayed 	<ul style="list-style-type: none"> • Menu: Reset All Errors • Cycle MMC Power
Vacuum Error	System	The Vacuum level has been either below 0.5 inHg or above 10 inHg for 1 minute.	<ul style="list-style-type: none"> • All running pumps are shutdown • Error status is displayed 	<ul style="list-style-type: none"> • Cycle System "Running" Status • Menu: Reset All Errors • Cycle MMC Power
Connection Error	System	No pumps are connected to the Master Controller.	<ul style="list-style-type: none"> • Error status is displayed 	<ul style="list-style-type: none"> • Automated, once a pump is connected
Drain Error	System	Tripped Floats that caused an Active Drain condition are still tripped after the 1 Minute Active Drain delay.	<ul style="list-style-type: none"> • Error status is displayed 	<ul style="list-style-type: none"> • Menu: Reset All Errors • Cycle MMC Power
Critical Temp	System	The PCB Temperature is above 130 °F.	<ul style="list-style-type: none"> • All running pumps are shutdown • Error status is displayed 	<ul style="list-style-type: none"> • Menu: Reset All Errors • Cycle MMC Power

TROUBLESHOOTING

Problem	Possible Cause	Possible Solutions
1. Tanks does not drain.	<ul style="list-style-type: none"> a. Gate Valve in closed position. b. Drain check valve clogged. c. Clogged drain. d. Separator tank is full and will not drain. 	<ul style="list-style-type: none"> a. Open Gate Valve fully. b. Call your authorized dealer for repair service. c. Call your local plumber. d. Tank must be hooked up to an open drain. If hooked to an open drain and tank won't drain call your authorized dealer for repair service.
2. No suction.	<ul style="list-style-type: none"> a. Master Controller not turned on. b. Pump not turned on. c. Pump not running. d. Kinked or collapsed suction hose. 	<ul style="list-style-type: none"> a. Turn Master Controller on. b. Turn pump main power switch to ON. c. See problem 5 below. d. Check the suction line from the unit to the separation tank and the separation tank to the operatory line. If clogged, collapsed or kinked call your authorized dealer for repair service.
3. Poor or low suction	<ul style="list-style-type: none"> a. Restricted air exhaust. b. Restricted air suction. 	<ul style="list-style-type: none"> a. Check air exhaust pipe to make sure it conforms to specifications. Check and clear possible restrictions in exhaust line. b. Check the suction line from the unit to the separation tank and the separation tank to the operatory line. If clogged , collapsed or kinked call your authorized dealer for repair service.
4. Excessive suction	<ul style="list-style-type: none"> a. Clogged or restricted vacuum inlet line to Master Controller. b. Malfunctioning Master Controller. 	<ul style="list-style-type: none"> a. Check and clear any clogs or restrictions, and/or fluid from vacuum inlet line. b. Call your authorized dealer for repair service.
5. Pump does not run.	<ul style="list-style-type: none"> a. Site circuit breaker is "OFF". b. Pump circuit breaker is "OFF". c. Master Controller circuit breaker is tripped. d. Low voltage Remote Control Panel Switch turned "OFF", or not connected properly. e. Electrical problem. 	<ul style="list-style-type: none"> a. Turn "ON" the site circuit breaker. b. Turn "ON" the pump circuit breaker. c. If the white section of the circuit breaker is visible, it is tripped. Flip this section back in to reset breaker. d. Make sure remote switch is turned "ON" and wired properly. e. Call your authorized dealer for repair service.

MAINTENANCE

Warning: Cleaning agents that contain bleach or foam should not to be used in this system. These cleaners will leech mercury from amalgam and pollute our environment. Please use non-foaming, non leaching, and biodegradable Clean Stream (PN 57850) for proper cleaning.

Initial Maintenance.

After installation, clean the vacuum lines with Clean Stream Cleaner. This is especially necessary when a new system is being installed into existing dental system piping. Using Clean Stream Cleaner helps the **MOJAVE** system to remove any built up deposits in the piping system. Perform the initial cleaning by performing the daily maintenance procedure provided below.

Maintenance-Free **MOJAVE** Pumps.

All **MOJAVE** pumps are designed for maintenance-free operation. The pump features a powerful 3-phase motor. The motor is completely water and oil-free and provides a dependable operation requiring no scheduled maintenance.

Preventive Maintenance.

Whenever a service technician fulfills a repair call at the customer site routine checks should also be performed to detect general overall wear, and replacement of parts should be made if necessary before a failure causes a prolonged shut-down. This preventive maintenance program will aid in dependable equipment operation and help reduce breakdown.

Scheduled Maintenance.

Since a well-organized maintenance program aids dependable equipment operation and reduces breakdown to a minimum, it is essential that the maintenance instructions be followed completely. The routine cleaning will remove any built up deposits in the piping system and the tank inspection will verify proper drainage before a failure causes a prolonged shut-down.

- Daily**
1. Clean drain lines from the operatory to the separator tanks with Clean Stream Cleaner by performing the procedure provided on the next page.
 2. A Washout Cycle is automatically initiated when the system has been in Standby for 5 minutes. During this cycle the Facility Main Water and the Washout Solenoids are activated and the tank is rinsed with water for 2 minutes via the wash-out fitting on the top of the tank. The Washout Cycle runs for 2 minutes as long as the system remains in Standby and will not be started again until after the system comes out of the Standby.

- Weekly**
1. Check for noise and leaks.
 2. Clean exterior surfaces
 3. Make sure that no flammable, corrosive, or combustible materials are stored in the equipment room (especially in the area around the equipment).

- Monthly**
1. Check tubing for kinks or cracks.
 2. Check drip leg for liquids on exhaust line.

Important: Evidence of buildup at the base drain or liquids reaching the float assembly most likely means that a stricter adherence to the daily maintenance procedure is required.

If problems are found during tank inspection, perform the daily maintenance Tank Washout procedure as necessary to remove buildup at the base drain. Reinspect to verify proper tank drainage.

- Semi-Annually**
1. Check the inlet filter on each pump assembly for buildup.
 2. Check for buildup at the base of the tank entering the drain to verify proper drainage.
 3. On CT20 Continuum tanks, check for buildup at the check valve connecting the two tank sections to verify proper liquid flow.

Warning: The following steps must be performed while wearing skin and eye protection designed for handling typical Haz-Mat material. Use care at all times to prevent spillage.

Caution: Use only Clean Stream Cleaner to maintain the system vacuum lines. Do not use chlorine bleach or solutions of sodium hypochlorite to disinfect the MOJAVE system. These materials may result in damage or destruction of equipment or loss of system performance.

Daily Maintenance - Clean Vacuum Lines

Clean all vacuum lines in the vacuum system with Clean Stream Cleaner daily as part of the overall preventive maintenance program. This helps to maintain the cleanliness of the tank as well as the vacuum lines and tubing throughout the system. Using the 2.5 liter bottle of Clean Stream Cleaner, PN 57850 and the Clean Stream dispenser system, PN 57665.

Required - Not Supplied

<u>Part No.</u>	<u>Description</u>
57850	2.5 Liter Bottle Clean Stream Cleaner (125 applications)
57665	Clean Stream Dispenser System 1 Bottle with o-rings and caps 1 Saliver Ejector Adapter 1 High-Volume Actuator Adapter 1 Small Suction Hose Adapter 1 Large Suction Hose Adapter



Part No. 57850



Clean Stream Dispenser System,
Part No. 57665

Procedure. Prepare the cleaning solution and clean the system daily by performing the following steps.

Note: The Clean Stream Dispenser can hold a maximum of 2 liters of solution for cleaning up to 2 operatories. Mix solution quantity as necessary.

1. Fill the Clean Stream dispenser with tap water as applicable;
 - a. to the line marked 1 L for 1 operatory
 - b. to the line marked 2 L for 2 operatories
2. Using the 20ml measuring line in the Clean Stream Cleaner bottle cap, add the Clean Stream Cleaner concentrate to the dispenser as applicable;
 - a. for 1 operatory, add 20ml of Clean Stream concentrate to the 1 liter of water
 - b. for 2 operatories, add 40ml of Clean Stream concentrate to the 2 liters of water
3. As shown by Figure 16, the interior of the Clean Stream dispenser bottle cap is configured with three holes for the insertion of HVEs and SEs via provided adapters as follows.
 - a. attach saliva ejector to smallest atomizing adapter
 - b. attach 1 or 2 high volume ejectors to respective adapter(s)
4. Refer to Figure 17 and place dispenser in the 2-liter vertical position or the 1-liter horizontal position as necessary.
5. With the vacuum pump on and handpiece valves open, aspirate the Clean Stream solution from dispenser.
6. After each cleansing procedure, disconnect the hand pieces and rinse the dispenser.

MAINTENANCE

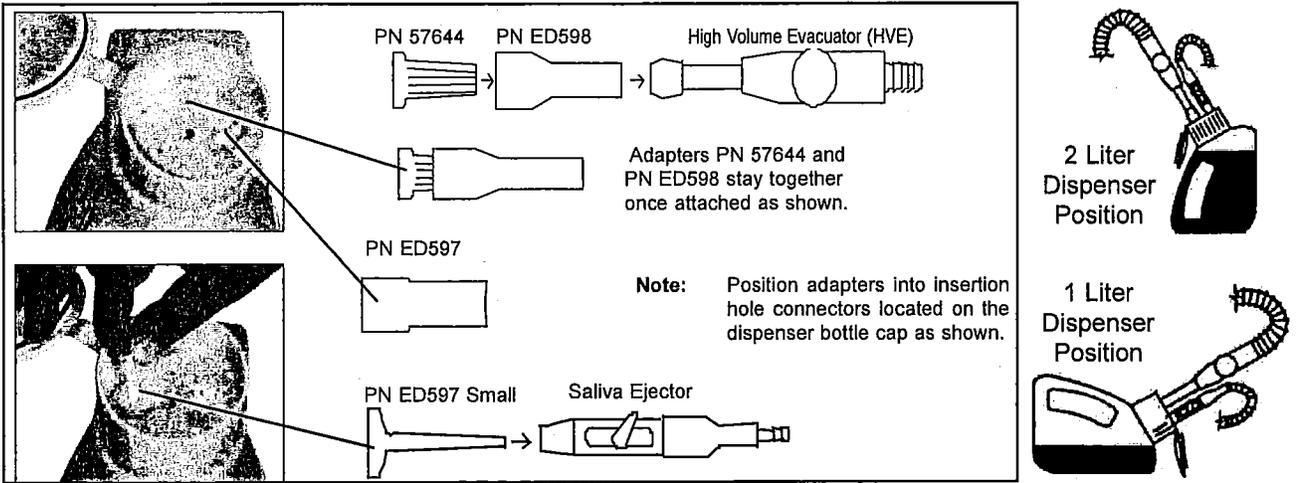


Figure 17. Clean Stream Dispenser Cap Adaptor Locations

BID STANDARD TERMS AND CONDITIONS

TERMS AND CONDITIONS FOR THIS BID

DELIVERY PER AGENCY

DELIVERY OF GOODS OR SERVICES AS REQUESTED BY AGENCY.

FISCAL YEAR

AWARDS EXTENDING BEYOND JUNE 30TH ARE SUBJECT TO AVAILABILITY OF FUNDS. CONTINUATION OF THE CONTRACT BEYOND THE INITIAL FISCAL YEAR WILL BE AT THE DISCRETION OF THE STATE. TERMINATION MAY BE EFFECTED BY THE STATE BASED UPON DETERMINING FACTORS SUCH AS UNSATISFACTORY PERFORMANCE OR THE DETERMINATION BY THE STATE TO DISCONTINUE THE GOODS/SERVICES, OR TO REVISE THE SCOPE AND NEED FOR THE TYPE OF GOODS/SERVICES; ALSO MANAGEMENT OWNER DETERMINATIONS THAT MAY PRECLUDE THE NEED FOR GOODS/SERVICES.

RIVIP INFO - BID SUBMISSION REQUIREMENTS

It is the Vendor's responsibility to check and download any and all addenda from the RIVIP. This offer may not be considered unless a signed RIVIP generated Bidder Certification Cover Form is attached and the Unit Price column is completed. The signed Certification Cover Form must be attached to the front of the offer. When delivering offers in person to One Capitol Hill, vendors are advised to allow at least one hour additional time for clearance through security checkpoints.

PURCHASE AGREEMENT BID

BIDDING (a) A single price shall be quoted for each item against which a proposal is submitted. This price will be the maximum in effect during the agreement period. Any price decline at the manufacturer's level shall be reflected in a reduction of the agreement price to the State. (b) Quantities, if any, are estimated only. The agreement shall cover the actual quantities ordering during the period. Deliveries will be billed at the single, firm, awarded unit price quoted regardless of the quantities ordered. (c) Bid price is net F.O.B. destination and shall include inside delivery at no extra cost. (d) Bids for single items and/or a small percentage of total items listed, may, at the State's sole option, be rejected as being non-responsive to the intent of this request. **ORDERING** (a) The User Agency(s) will submit individual orders for the various items and various quantities as may be required during the agreement period. (b) Exception - Regardless of any agreement resulting from this bid, the State reserves the right to solicit prices separately for any extra large requirements for delivery to specific destinations.

AWARD

THE STATE, AT ITS SOLE DISCRETION, SHALL RESERVE THE RIGHT TO MAKE ONE OR MULTIPLE AWARDS FOR THIS REQUIREMENT AND/OR TO REJECT ANY OR ALL BIDS.

TERMS CONTINUED:

INSPECTION REQUIREMENTS

BIDDERS ARE RESPONSIBLE FOR INSPECTION OF EQUIPMENT AND/OR LOCATION, TAKING MEASUREMENTS* WHEN REQUIRED, AND MAKING THEMSELVES AWARE OF THE TOTAL REQUIREMENT BEFORE SUBMITTING A BID. *MEASUREMENTS PROVIDED WITH ANY BID ARE FOR REFERENCE PURPOSES AND ARE NOT GUARANTEED TO BE COMPLETELY ACCURATE.

WAGE

BIDDERS ARE ADVISED THAT ALL PROVISIONS OF TITLE 37 CHAPTER 13 OF THE GENERAL LAWS OF RHODE ISLAND APPLY TO THE WORK COVERED BY THIS REQUEST, AND THAT PAYMENT OF THE GENERAL PREVAILING RATE OF PER DIEM WAGES AND THE GENERAL PREVAILING RATE FOR REGULAR, OVERTIME, AND OTHER WORKING CONDITIONS EXISTING IN THE LOCALITY FOR EACH CRAFT, MECHANIC, TEAMSTER, OR TYPE OF WORKMAN NEEDED TO EXECUTE THIS WORK IS A REQUIREMENT FOR BOTH CONTRACTORS AND SUBCONTRACTORS. THE PREVAILING WAGE TABLE MAY BE OBTAINED AT THE RI DIVISION OF PURCHASES HOME PAGE BY INTERNET AT www.purchasing.state.ri.us . SELECT "INFORMATION" AND THEN SELECT "PREVAILING WAGE TABLE". THE STATE OF RHODE ISLAND USES THE GENERAL DECISION NUMBER R120030001. PRINTING THE ENTIRE DOCUMENT AVERAGES APPROXIMATELY ONE MINUTE PER PAGE. YOU MAY WANT TO PRINT ONLY THE PAGES APPLICABLE TO YOUR BID. BIDDERS NOTE: IN THE EVENT THIS BID SPECIFIES PRICE OFFERS ON A TIME-AND-MATERIAL BASIS, ie., AN HOURLY RATE, ANY OR ALL BIDS SUBMITTED IN AN AMOUNT LESS THAN THE PREVAILING RATE IN EFFECT FOR WORK COVERED BY THIS REQUEST AS OF THE DATE OF BID ISSUANCE SHALL BE REJECTED BY THE DIVISION OF PURCHASES.

INSURANCE REQUIREMENTS

AN INSURANCE CERTIFICATE IN COMPLIANCE WITH PROVISIONS OF ITEM 31 (INSURANCE) OF THE GENERAL CONDITIONS OF PURCHASE IS REQUIRED FOR COMPREHENSIVE GENERAL LIABILITY, AUTOMOBILE LIABILITY, AND WORKERS' COMPENSATION AND MUST BE SUBMITTED BY THE SUCCESSFUL BIDDER(S) TO THE DIVISION OF PURCHASES PRIOR TO AWARD. THE INSURANCE CERTIFICATE MUST NAME THE STATE OF RHODE ISLAND AS CERTIFICATE HOLDER AND AS AN ADDITIONAL INSURED. FAILURE TO COMPLY WITH THESE PROVISIONS MAY RESULT IN REJECTION OF THE OFFEROR'S BID. ANNUAL RENEWAL CERTIFICATES MUST BE SUBMITTED TO THE AGENCY IDENTIFIED ON THE PURCHASE ORDER. FAILURE TO DO SO MAY BE GROUNDS FOR CANCELLATION OF CONTRACT.

TERMS CONTINUED:

NOTE: IF THIS BID COVERS CONSTRUCTION, SCHOOL BUSING, HAZARDOUS WASTE, OR VESSEL OPERATION, APPLICABLE COVERAGES FROM THE FOLLOWING LIST MUST ALSO BE SUBMITTED TO THE DIVISION OF PURCHASES PRIOR TO AWARD: * PROFESSIONAL LIABILITY INSURANCE (AKA ERRORS & OMISSIONS) - \$1 MILLION OR 5% OF ESTIMATED PROJECT COST, WHICHEVER IS GREATER. * BUILDER'S RISK INSURANCE - COVERAGE EQUAL TO FACE AMOUNT OF CONTRACT FOR CONSTRUCTION. * SCHOOL BUSING - AUTO LIABILITY COVERAGE IN THE AMOUNT OF \$5 MILLION. * ENVIRONMENTAL IMPAIRMENT (AKA POLLUTION CONTROL) - \$1 MILLION OR 5% OF FACE AMOUNT OF CONTRACT, WHICHEVER IS GREATER. * VESSEL OPERATION - (MARINE OR AIRCRAFT) - PROTECTION & INDEMNITY COVERAGE REQUIRED IN THE AMOUNT OF \$1 MILLION.

END DOCUMENT